


□□□□□□□□ □□□□□□□□ □□□□□□ □□□□□□ □□□□□□ □□□□□□:

Instructions for adjusting tension on Glass to Glass hinge

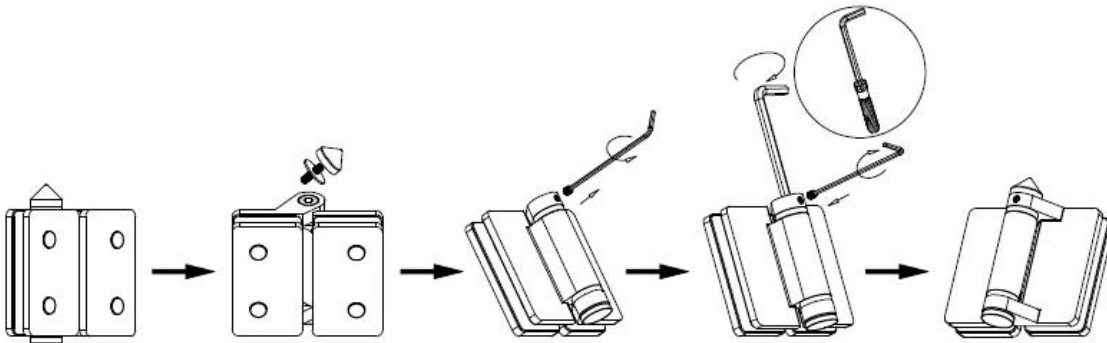

STEP 1
Remove cone and grub screw by turning anticlockwise to reveal tension pin.

STEP 2
Remove grub screw from side of hinge with Allen Key supplied.

STEP 3
Turn the tension pin clockwise to the next hole in tension pin, then tighten the grub screw, repeat this process a Maximum of three times or 360°, Do not over tension.

□□□□□□ □□□□□□ □□ □□□□□□□□ □□ □□□□□□□□:

[12-10 ثقبو المطلوبة حولة سطح حنفيه 2205 دولكس للزجاج](#)

✘ [أستراليا الزجاج تجمع القياسية حنفيه، الفولاذ المقاوم للصدأ والزجاج الحدار حنفيه، حنفيه مربع](#)

✘ [زجاج الباب المفصلي، بوابة المفصلي الزجاج، الحديد المطاوع، الفولاذ المقاوم للصدأ 316، جودة عالية](#)

✘ [الصين شنتشن بوابة رخيصة تجمع الزجاج الفولاذ المقاوم للصدأ السياج تتوقف الذاتي إغلاق بوابة المفصلي](#)



زجاج قابل للتعديل إلى الجدار الباب المفصلي، زجاج بالتصدي المفصلي آخر، ربيع
تحميل بوابة المفصلي



باب حديدي المفصلي، والزجاج إلى آخر حولة المفصلي، غير القابل للصدأ IMM الزجاج 12
المفصلي الصلب لدرائزين الزجاج

