

RVS glas klemmen voor 3/8 inch glas 44x44x25mm (model G102)

1. Gedetailleerde informatie

- MOQ 50 stuks
- Voor 3/8 inch glas
- Gemonteerd op vierkante RVS relingpalen, met platte rug
- 304/316 roestvrij staal, gepolijst of satijn afwerking
- Afmeting 44x44x25mm

2. foto's voor RVS glas klemmen voor 3/8 inch glas 44x44x25mm (model G102)









3. verschillende modellen van roestvrijstalen glazen klemmen voor 3/8 inch glas 44x44x25mm (model G102)

| | |
|----------|--------------------------|
| Material | Stainless steel 304/ 316 |
| Finish | satijn / mirror polished |

| | |
|---------------------|--------------------------|
| Material | Stainless steel 304/ 316 |
| Finish | Satijn / mirror polished |
| For glass thickness | 6mm -13.52mm |

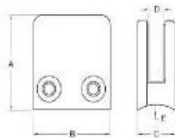

| Model No. | A | B | C | D | E |
|-----------|----|----|----|----|--------|
| G102 | 44 | 44 | 25 | 11 | 0 |
| G102R | 46 | 44 | 25 | 11 | R:21.5 |

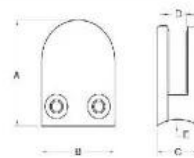

| Model No. | A | B | C | D | E |
|-----------|----|----|----|----|--------|
| G103 | 50 | 40 | 22 | 6 | 0 |
| G104 | 50 | 40 | 28 | 12 | 0 |
| G105 | 55 | 45 | 26 | 14 | 0 |
| G103R | 52 | 40 | 22 | 6 | R:21.5 |
| G104R | 52 | 40 | 28 | 12 | R:21.5 |
| G105R | 58 | 45 | 26 | 14 | R:25.4 |

4. Installatie-instructies van roestvrijstalen glazen klemmen


Glass Clamp Installation Guide



1
Mark and centre punch desired location of blind rivet nut location.



2
Drill centre punched hole in tube to suit blind rivet nut.

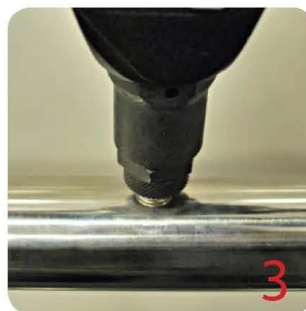

3
Insert blind rivet nut into tube and fasten with blind rivet tool.



4
Check installed blind rivet nut is secure and ready for install.



5
Align half glass clamp with blind rivet nut inline position. Screw in button head cap screw into thread and tighten with hex key.



6
Select appropriate rubber gasket to suit glass panel thickness. Install rubber gasket into both sides of glass clamp. (Note rubber gasket marked with sizes).



6a
If heavier clamping load is required please use supplied glass clamp pin, during the install process. Note glass panels will require drilling in order to fit glass clamp pins.



7
Fit glass panel into position, install second half of glass clamp secure with provided hex screws.



8
Tighten glass clamps with hex key, and check glass panel are secure with no movement.





