:مقدمة SBM الزجاج حنفية



SBM


البعد:


:MMارتفاع: 168 العرض: 50ملم جولة؛ :MMارتفاع الأخدود: 110

58:000 000 0000mm 00

قطر القاعدة: 98مم؛

 $2 \times M8$ grub screws, SS316 pressure plate, special high quality حشية. $2 \times M8$ grub screws, SS316 pressure plate, special high quality $2 \times M8$ grub screws, SS316 pressure plate, special high quality $2 \times M8$ grub screws, SS316 pressure plate, special high quality $2 \times M8$ grub screws, SS316 pressure plate, special high quality $2 \times M8$ grub screws, SS316 pressure plate, special high quality $2 \times M8$ grub screws, SS316 pressure plate, special high quality $2 \times M8$ grub screws, SS316 pressure plate, special high quality $2 \times M8$ grub screws, SS316 pressure plate at the sum of the sum o

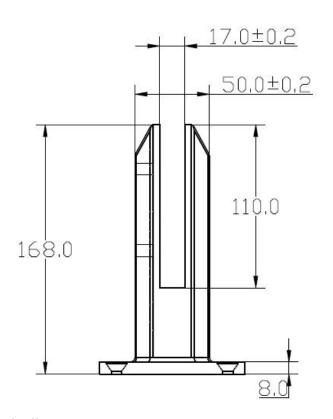

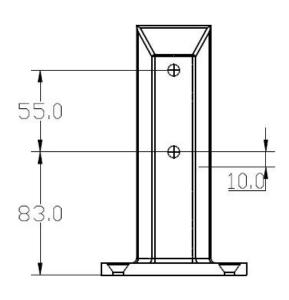


:المواد

Marine grade 316 Stainless Steel material to maximize the products life and appearance. This premium quality material is low carbon | | | | | | | | | |

_____ - tough, durable, excellent resistance to corrosion, suitable for outdoor uses. السطح:

Finished with a fantastic high quality mirror polished finish.

<u>الرسم الفني هنا SBM تحميل حنفية الزجاج</u>.

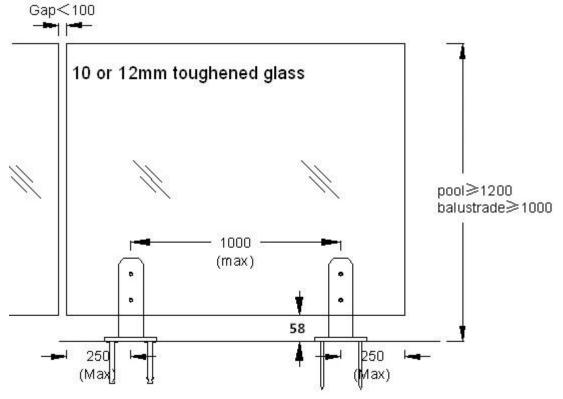

الميزة: SBM الزجاج حنفية

- 1.Strong friction clamping system for NO HOLE glass, quick and easy to DIY Install. You can p ut as many clamps as you like along larger panels of glass.
- التي صنابير هي الصلبة الفولاذ المقاوم للصدأ! ليس أجوف! 2.Glass
- تشديد الزجاج. MM □ 3.Suits 10 12
- 4.Designed and manufactured according to to Australian Standard for swimming pool fencing safety, Australia Balustrade Standard AS□NZS.

:التطبيق SBM الزجاج حنفية

Stainless steel glass spigots used for fixing glass of swimming pool fencing walls for outdoor living, antirust and very durable.

Nice-

looking mini posts apply to support 10 or 12mm fully frameless glass for fence in home & gar den.

Glass gator clamps for the construction of glass handrails for a beautiful stair balustrade or b alcony.

التثبيت: SBM DIY الزجاج حنفية

- من خط الوسط من الزجاج السياج المقترح. 1.Mark
- 2.Determine spigot location and mark out the hole positions, drill the required holes.
- 3.Bolt the base plated spigot into position using the expansion screws for concrete/pavings/til es or timber screws for wooden decking.
- لوحة الغلاف قبل تثبيت الزجاج بدون إطار. 4.Fit
- 5.Install the glass to the spigots and tighten the clamp with supplied Allen key.

:التعبئة والتغليف SBM الزجاج حنفية

Each glass spigot with 1 cover fitted is wrapped up with one air foam bag to protect from scratches.

Each spigot with foam bag is put into 1 carton box.

مسامير التوسع وجهاز كمبيوتر شخصي 4

4 sets timber screws for installation wrapped by thick rubber hose is put together with 1 spig of

وتكتظ 4 مربعات صغيرة في 1 علبة كرتون كبيرة.

1 set installation tool allen keys free supplied in 1 big box.

Each big carton box is individually wrapped up with wrapping film & packing tapes.