الفولاذ المقاوم للصدأ 316 دوبلكس 2205 مربع الزجاج حنفية، فرملس الزجاج الدرابزين سبيغوتي

وصف المنتج

المنتج ماأنا	فرملس الزجاج درابزين مربع حنفية
مواد	الفولاذ المقاوم للصدأ 316 / دوبلكس 2205
إنهاء	مرآة مصقول / الساتان نحى
إلى عن على غلاسس Thickness	8-13mm
ارتفاع	168mm
حجم قاعدة مربع	100x100mm
الوزن الصافي	1.577kg / قطعة
طريقة التصنيع	صب (جودة عالية)
تفاصيل التعبئة	1) قطعة واحدة في كيس فقاعة واحدة، ثم في مربع أبيض واحد مليمتر الكرتون كرتون 2 x330x230) 12 أجزاء في 365 3) التعبئة حسب متطلبات العملاء
الوضعية	حمام سباحة سياج، شرفة الزجاج حديدي، سطح فرملس الزجاج حديدي، سلالم درابزين التصميم
Certifiالكاتيون	إيت أستراليا ونيوزيلندا المعاييرM. نعم فعلا
Sفسيح	متاح
موك	غير محدود. يمكنك طلب حسب عملك المتطلبات.
الخدمات ODM أوم & أمب؛	متاح

□□□□□ □□□□□□ □□□□ Destails

1) □□□□□□ □□□□□ □□□□□□ □□□□□

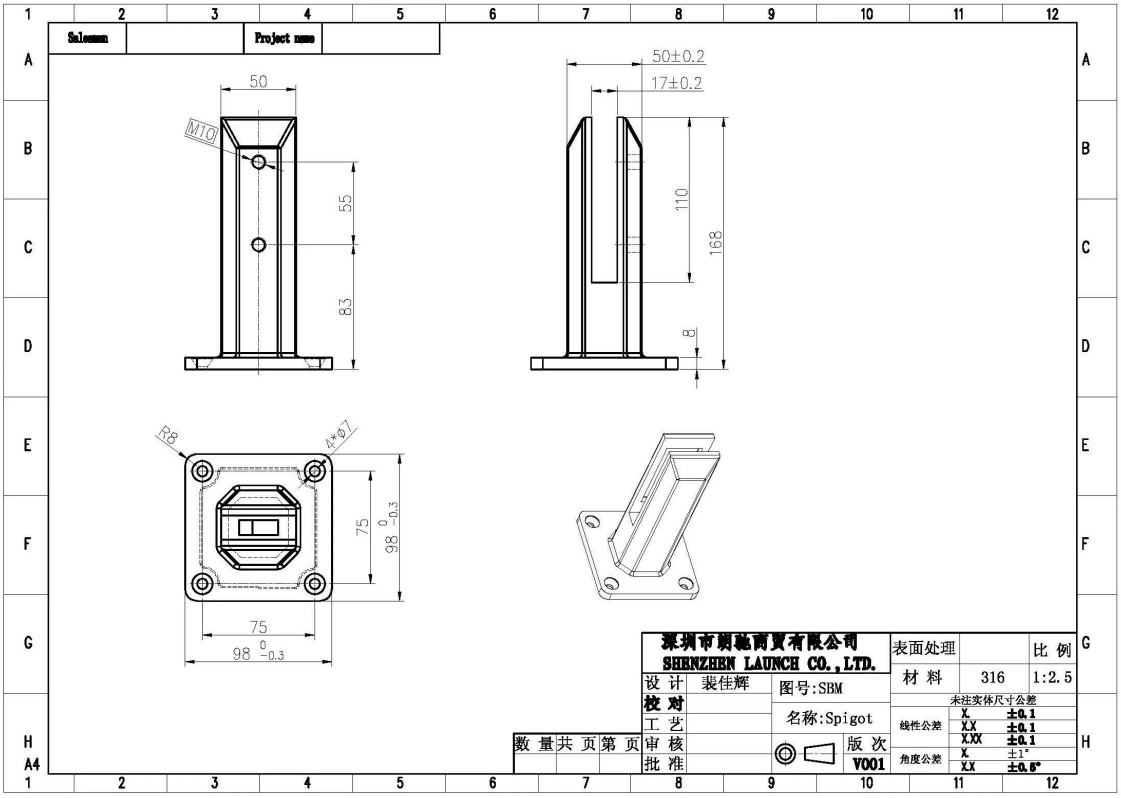
Salesman
Project name
50
M10
55
83
50±0.2
17±0.2
110
168
8
R8
4×Φ7
75
98 0 -0.3
75
98 0 -0.3
深圳市朗越商贸有限公司
SHENZHEN LAUNCH CO.,LTD.
设 计 裴佳辉
校 对
工 艺
审 核
批 准
图号:SBM
名称:Spigot
版 次
V001
数 量 共 页 第 页
表面处理
材 料 316
比 例 1:2.5
未注实体尺寸公差
线性公差 X ±0.1
XX ±0.1
XXX ±0.1
角度公差 X ±1°
XX ±0.5°

□□□□ □□□□□ □□□ (2

2012/10/13

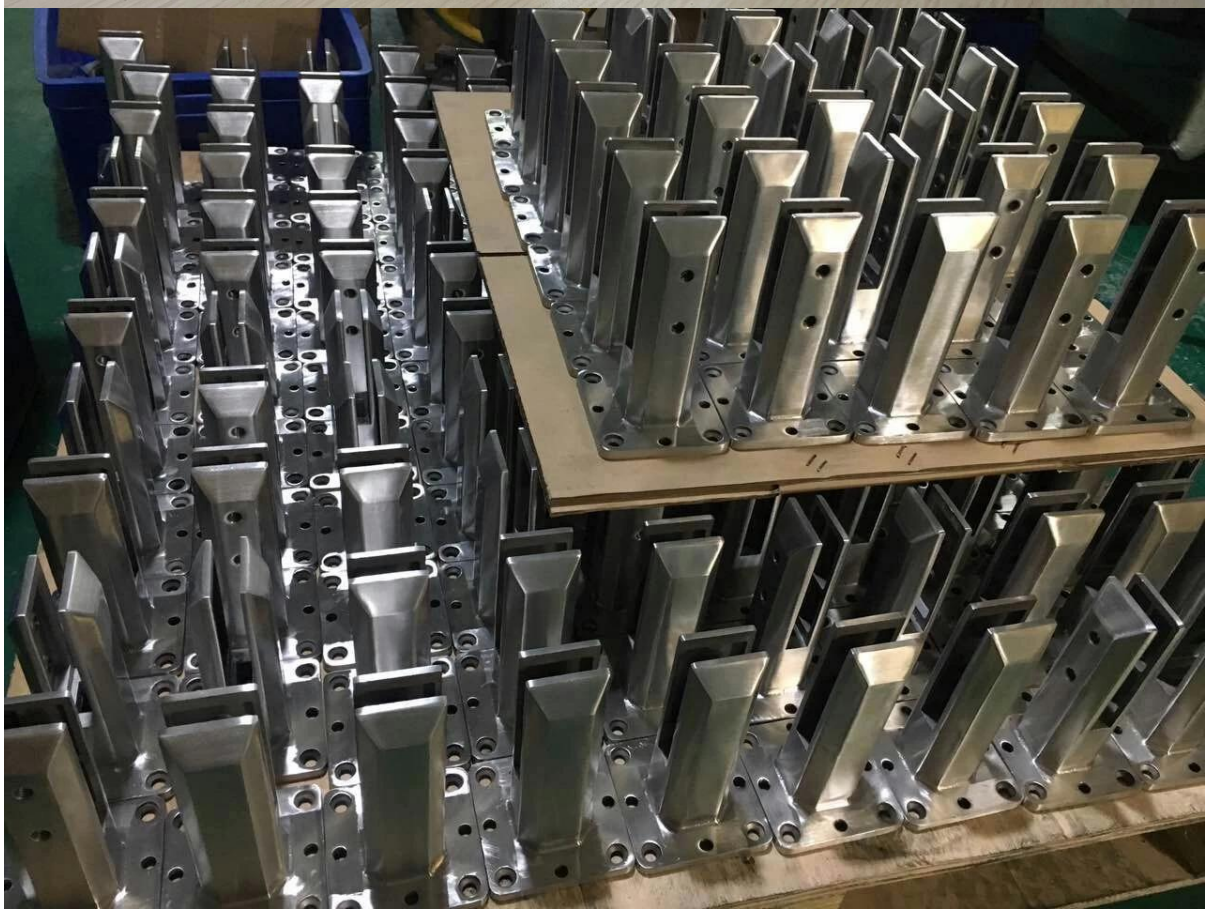

□□□□□□□□ □□□□ (3

fixing method: base plate spigots

Mark out the centre line of proposed glass fence with a chalk line. Determine clamp location based on a sheet size (recommendation on pages 1 & 2). Use base plate as a template to mark out the hole positions and drill holes to suit.

Note: Do not exceed 100mm gaps between glass panels. Optimum gap is 40mm to 60mm

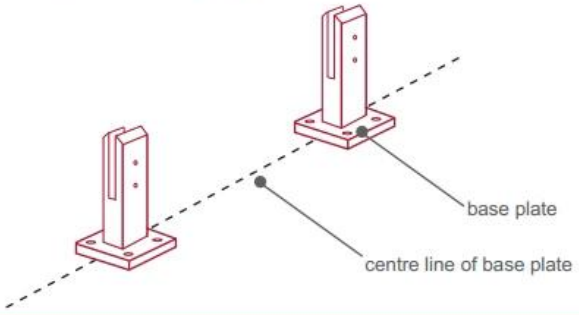

Now the base plated spigots can be fitted to the floor and plumbed via shims (not supplied) under the base plates. Be sure to tighten firmly as the smallest of movement at the base plate will result in noticeable movement at the bottom of the glass fence.

Tip: By setting the two outer spigots of your total span, a string line can be run in the 'throat' of the spigots, giving correct height for all spigots in between

Note: Do not exceed 100mm gap from the fixing surface to the bottom of the glass

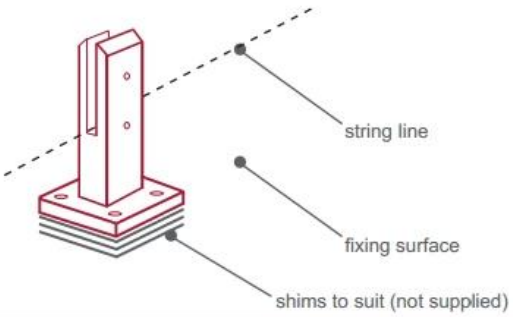

When all spigots are installed, slip domical cover the top of the spigot to hide fixings. It will be necessary to turn the adjustment screws on the spigot face all the way in to allow cover to pass over

Note: Same installation method applies to round base plate spigot

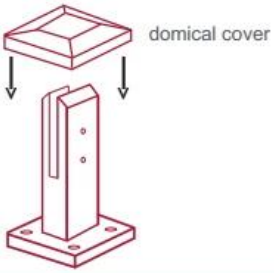

The glass is then installed to the spigots.
Place plastic packers between glass & spigot, at no stage should glass touch the metal
How adjustability works:
1. Place glass in spigot
2. Fix/ tension glass both sides with allen key

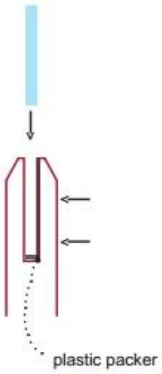

[illegible]

.[illegible] .1
365 [illegible] 12 x330x230 .[illegible]
.[illegible] .2

□□□□□□□□□□

□□□□□□ □□ □□□□□□□ □□ .1
SS304□ SS316□ SS316L□ .□□□ □2205 □□□□□□□

□□□□□□□□□ □□□□□□□□ □□□□□□ □□ □□□□□ □□ □□□□□□ .2
□□□□□ □□□□□ □□□□□□□□ □□□□□□□□□ □□□□□□□□ □□□□ □□□□□□ □□□□ □□□□□□□□□ □□ □□□□□□□ □□□□ □□□□□□ □□□□□□ □□□□ □□□□□
.□□□□□□ □□□□□□□□ □□□□□ □□ □□□□ □□□□□□□ □□□□□□□ □□□□ □□□□□ □□□□□

□□□□□□□□ □□□□□ □□□□□ & □□□□ □□□□□ □□ .3
□□□□□□ □□□□□□□□□□ □□ □□□□□□□□ □□□□ .□□□□□□□□ □□ □□□□□□□ □□□□□□□□□ □□□□□ □□□□□□□□□ □□□□□□ □□□□□□□ □□□□□
.□□□□ □□□□□□□ □□□□□□□ □□□□□□□□□ □□□□□□□□ □□□□□ □□□□□□ □□□□□

□□□□□□ □□□□□□ □□□□ □□□□ .4
□ □□□□ □□ / / c□ .□□□□ □□□□□ □□□□□□ □□□□□ □□□□

□□□□□□□ □□□□□□ □□ □□□□ .5
t / t (30/70) □□ l / c .□□□□□□ □□

□□□□□□□□□ □□□□ □□ □□□□ .6
.□□□□□□□ □□□□□□ □ □□□□ □□□□□ 25-15 .□□□□□□□ □□□□ □□□□ □ □□□□ □□□□□ 5 □□□□□

□□□□□ □□□□□ --□□□□ □□□□□□□ □□ .7
.□□□□□ 24 □□□□□ □□□□□□ □□□□□ □□□□□ □□□□□□□□□□ □□□□□ □□□□ □□□□□ □□ □□□□□□□□

□□□□□

!□□□□ □□□□ □□□□□ □□ □□□□□□ □□□□□ □□□□ .□□□□□□ □□□□ □□□□□ □□□□□□□ □□ □□□□□□□□□□ □□

□□□□□□ □□□□□ □□□ □□□□□ □□□ □□□□□□ □□□□ □□□□□ □□□□□□□ □□□
□□□□□: launch_04
973219879 :□□□□□
13530506265-86 + :□□ □□□□ / □□□

董 萍 Doris Dong
Senior Sales Representative
(86) 135 3050 6265

深圳市南山区南山大道1092号亿利达大厦B区3栋5003
Room 5003, Building 3, Yilida Building, No. 1092 Nanshan Road, Nanshan District, Shenzhen, China postal code 518054

(86-755) 8603 7559
(86-755) 8637 2611
sales04@launch-china.cn
www.launch-china.com
www.chinabalustrade.com