

Shenzhen Lanzamiento Co., Limitado es especializado en el desarrollo y fabricación de alto grado de metales y materiales. Desde el año 2004, nosotros tenemos nuestra propia fábrica situada en Dongguan. Abajo yo haré una introducción más detallada acerca de la instalación de los vasos de espiga para su revisión.


### Especificaciones del producto

|                                 |                                      |
|---------------------------------|--------------------------------------|
| Nombre del producto             | Grifo de vidrio de montaje lateral   |
| Material                        | 304SS / 316SS / 316LSS / Dúplex 2205 |
| Acabado de superficie           | Espejo / Satinado / Negro mate       |
| Para espesor de vidrio          | 10-13,52 mm                          |
| Solicitud                       | Valla de piscina, valla de balcón    |
| Otros tipos de montaje vertical | SBM / SCM RBM / RCM                  |

### Producto mostrar



## Side Mounted Glass Spigot

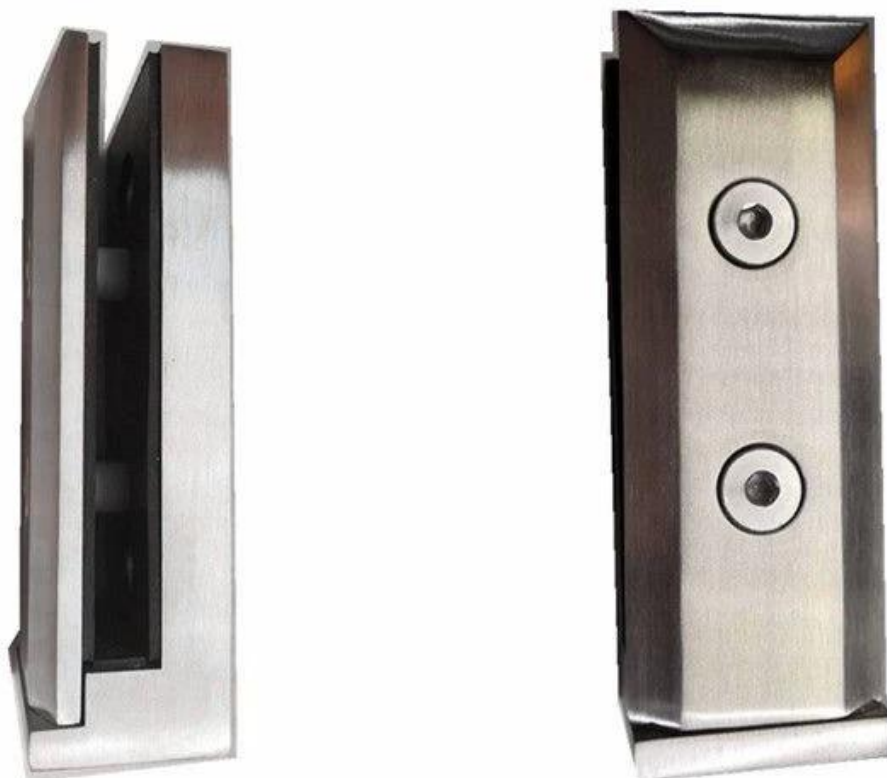


## Explotóver



## MasaProducción



## TécnicoDibujo

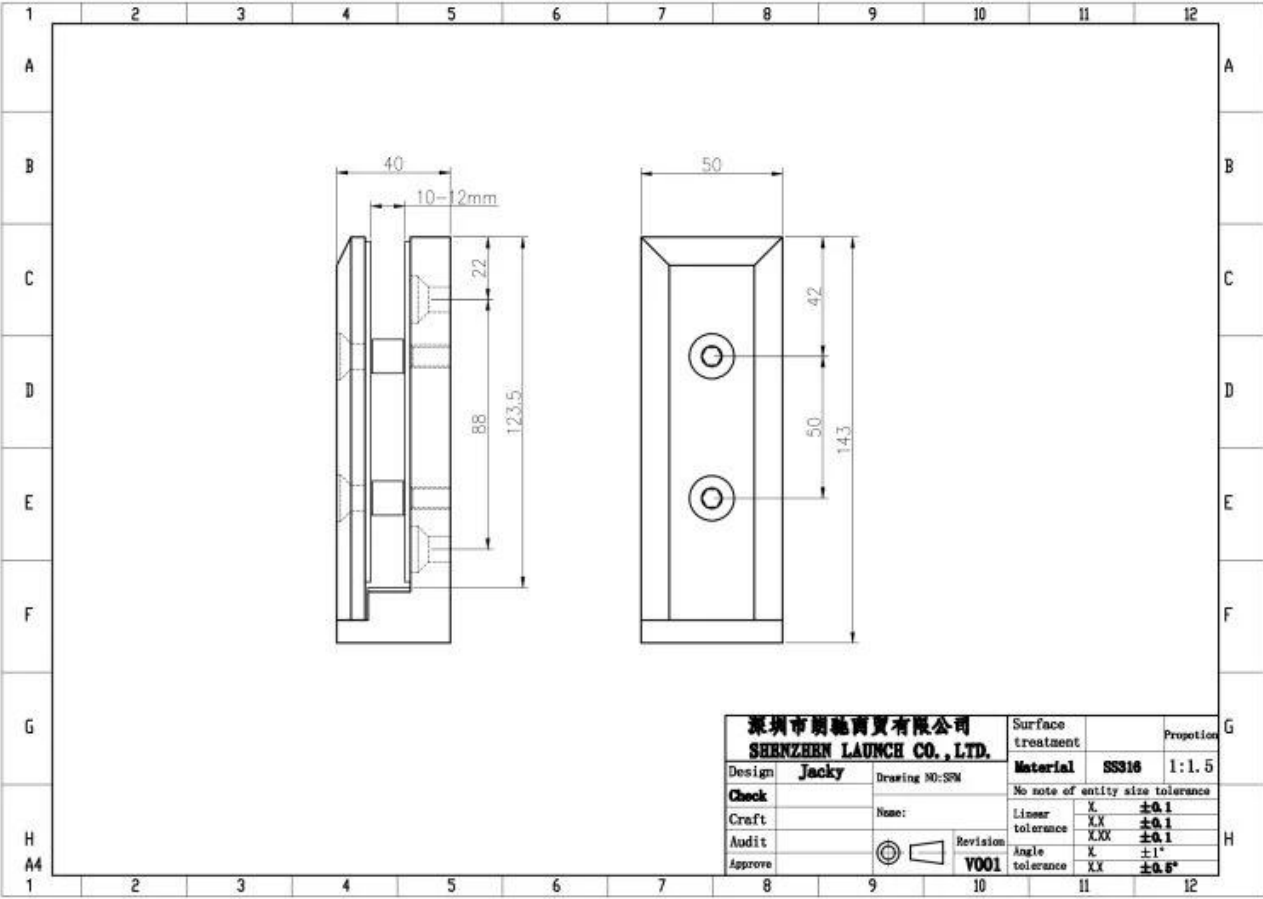

CómoAarmar



With the front face plate removed, level or align the Clamps to your design plan, taking into account the spacing recommendations and weight limitations shown on the back of this page. Be sure to secure the Clamps to an engineered and approved substrate with appropriate fasteners. You can fabricate the glass ahead of time, however, we recommend calculating hole locations after the Clamps are installed to account for any clamp movement.



Check the layout of the Clamps for alignment, then do a layout for fabricating holes in the glass to meet the installed measurements and spacing between glass panels.



Place the gaskets against the base fitting, both back and bottom lip, then set the glass panel on the base fitting. Next place the front gasket against the glass panel along with the front plate and secure to the base fitting by tightening the two screws. Don't tighten all the way, leave enough play to adjust the glass panel.



After you have achieved the proper alignment tightly secure the front plate screws to finish the installation. Clean the glass and view from a distance to determine if everything matches up and looks good. Adjust if necessary.

## ProyectoFoto









### **Otro tipos vertical montado vaso espiga**

**Acabado de superficie de espejo**





**Acabado superficial satinado**





**Acabado superficial negro mate**



No dude en ponerse en contacto con ellos cuando tenga una consulta.

A la atención de: Frank Fang

Teléfono: +8615906261741

Correo electrónico: [sales02@launch-china.cn](mailto:sales02@launch-china.cn)