

SpiGOT en verre Duplex 2205 Matt Noir pour rames en verre sans cadreType de fixation de la plaque de fixation de la plaque balustrades en verre SPIGOT.

Caractéristiques de Spigot de verre noir mat

- Modèle No. SBM
- Matériau duplex 2205
- Couleur noire mat par électro placage
- pour 10-13.52mmun verre
- Avec couvercle de base, joint en plastique
- **Type de réglage avec plaque de nivellement**


Photos de SpiGot de verre noir Matt SBM-



KEBIL 科比奥®



Dessins de SBM Spigot-

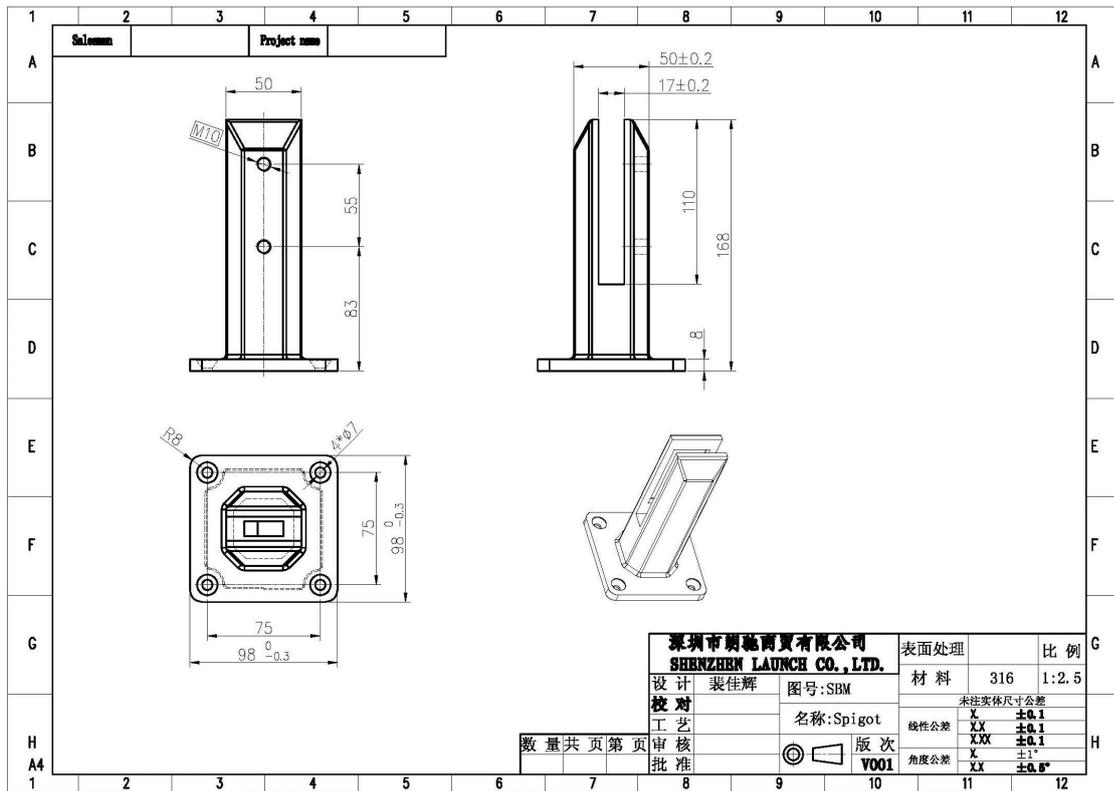

Rapport de test de 2205 SPIGOT en verre de matériau-



12/16/2020 5:54:18 PM

Method: Fe-30

12/16/2020 5:54:09 PM

Comment: Cr-, Cr/Ni-steel

Type corr.concentr.

Type Standard 18--8

Sample Name:

Sample ID:

| | C | Si | Mn | P | S | Cr | Mo | Ni |
|-----------|--------|--------|--------|--------|--------|---------|--------|--------|
| | % | % | % | % | % | % | % | % |
| < x > (1) | 0.0224 | 0.8873 | 1.1010 | 0.0263 | 0.0032 | 21.6796 | 3.0718 | 5.5691 |

| | Al | Co | Cu | Nb | Ti | V | W | Pb |
|-----------|----------|--------|--------|----------|--------|--------|--------|----------|
| | % | % | % | % | % | % | % | % |
| < x > (1) | < 0.0005 | 0.0797 | 0.1603 | < 0.0002 | 0.0044 | 0.0893 | 0.0305 | < 0.0002 |

| | Sn | Sb | B | N | Fe | | | |
|-----------|--------|----------|--------|--------|---------|--|--|--|
| | % | % | % | % | % | | | |
| < x > (1) | 0.0092 | < 0.0004 | 0.0024 | 0.1024 | 67.1600 | | | |


Guide d'installation pour le verre SpiGot-



fixing method: base plate spigots

Mark out the centre line of proposed glass fence with a chalk line. Determine clamp location based on a sheet size (recommendation on pages 1 & 2). Use base plate as a template to mark out the hole positions and drill holes to suit.


Note: Do not exceed 100mm gaps between glass panels. Optimum gap is 40mm to 60mm

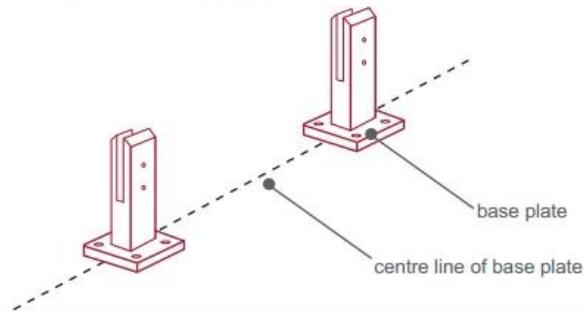

Now the base plated spigots can be fitted to the floor and plumbed via shims (not supplied) under the base plates. Be sure to tighten firmly as the smallest of movement at the base plate will result in noticeable movement at the bottom of the glass fence.


Tip: By setting the two outer spigots of your total span, a string line can be run in the 'throat' of the spigots, giving correct height for all spigots in between

Note: Do not exceed 100mm gap from the fixing surface to the bottom of the glass

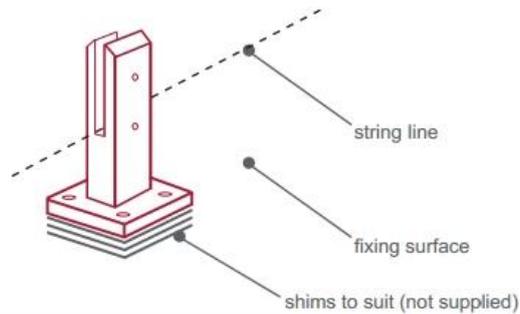

When all spigots are installed, slip domical cover the top of the spigot to hide fixings. It will be necessary to turn the adjustment screws on the spigot face all the way in to allow cover to pass over


Note: Same installation method applies to round base plate spigot

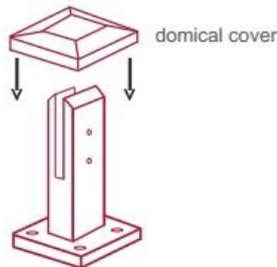

The glass is then installed to the spigots. Place plastic packers between glass & spigot, at no stage should glass touch the metal

How adjustability works:

1. Place glass in spigot
2. Fix/ tension glass both sides with allen key

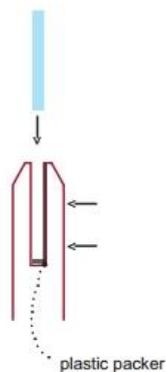

SpiGOT en verre avec plaque de nivellement de réglage






Galleries de projet de SpiGOT en verre Duplex 2205 de Matt Noir pour rampes en verre sans cadre









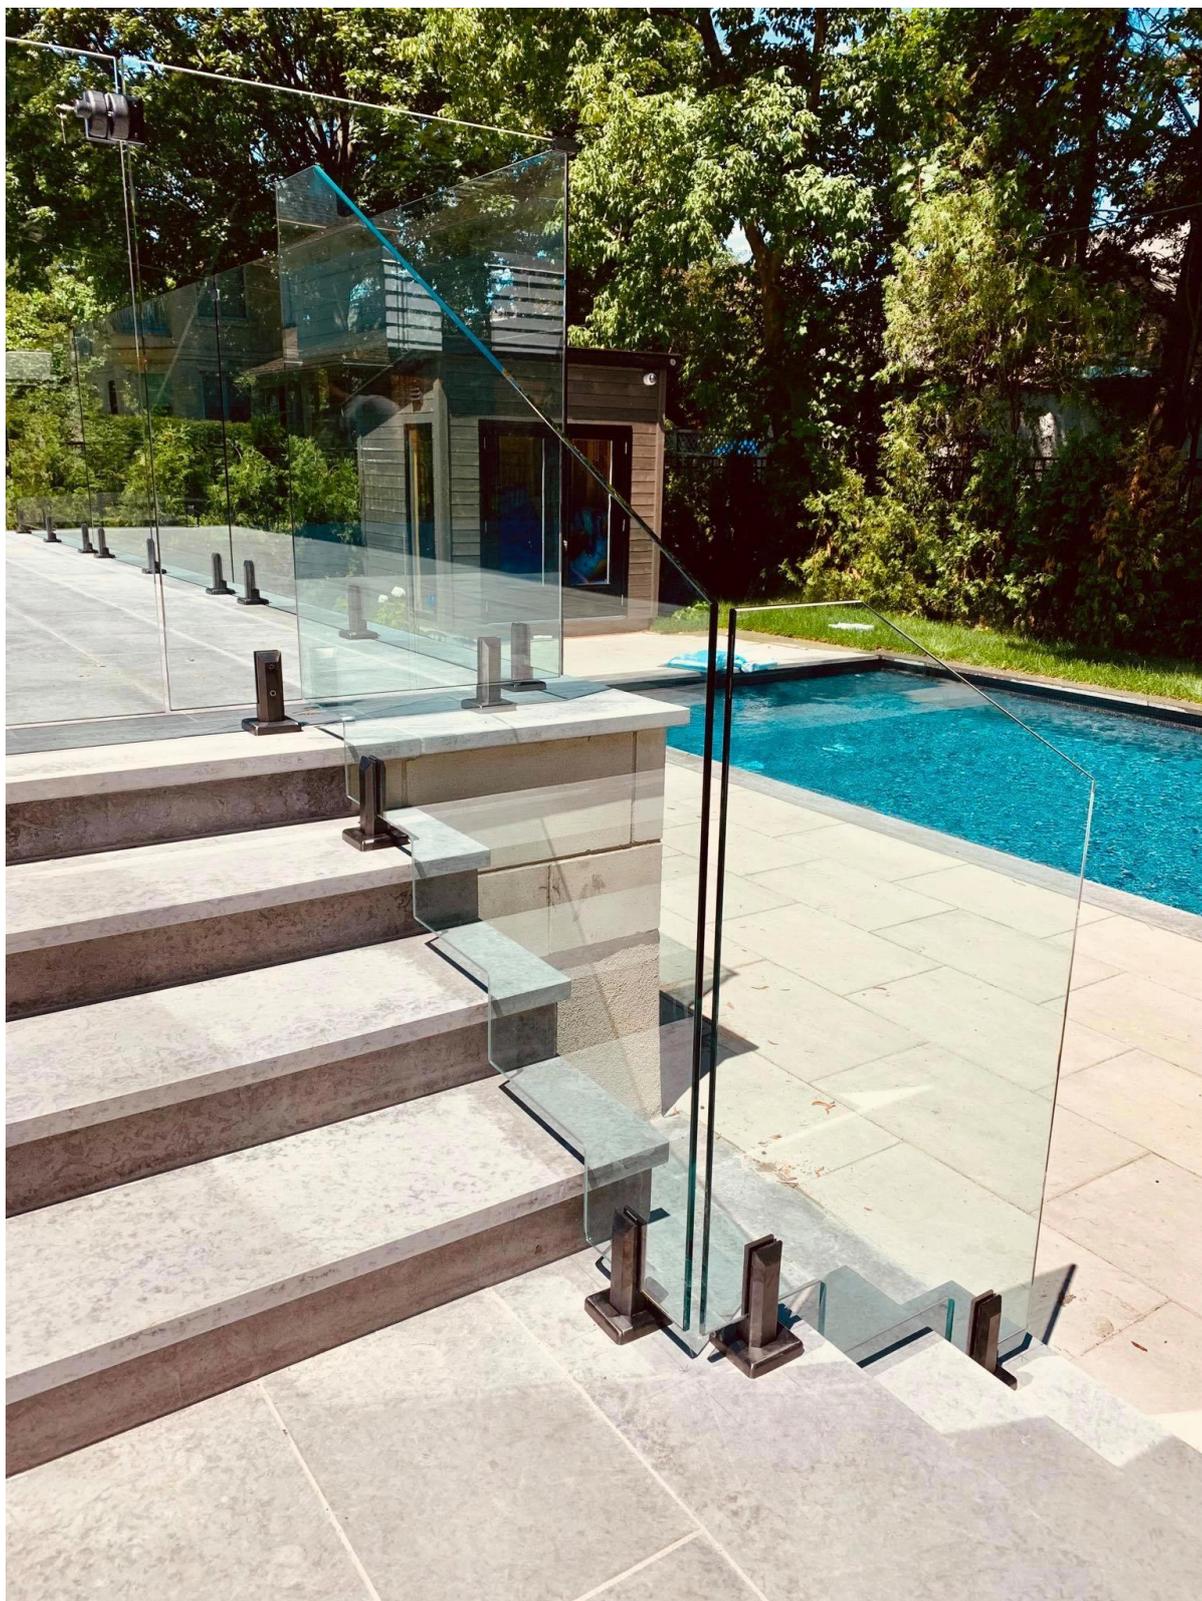

Contactez-nous maintenant pour obtenir les derniers prix!