

Spigot di vetro Duplex 2205 nero opaco per ringhiere in vetro senza telaio Ringhiere in vetro spigot tipo a montaggio a piastra di base.

Caratteristiche di spigot in vetro nero opaco-

- Modello n. SBM.
- Materiale Duplex 2205.
- Colore nero opaco mediante elettrolating
- per 10-13.52mm. bicchiere
- con coperchio di base, guarnizione in plastica
- **Tipo di regolazione con piastra di livellamento**


Foto di Matt Black Glass Spigot SBM-



KEBIL 科比奥®



Disegni di SBM Spigot-

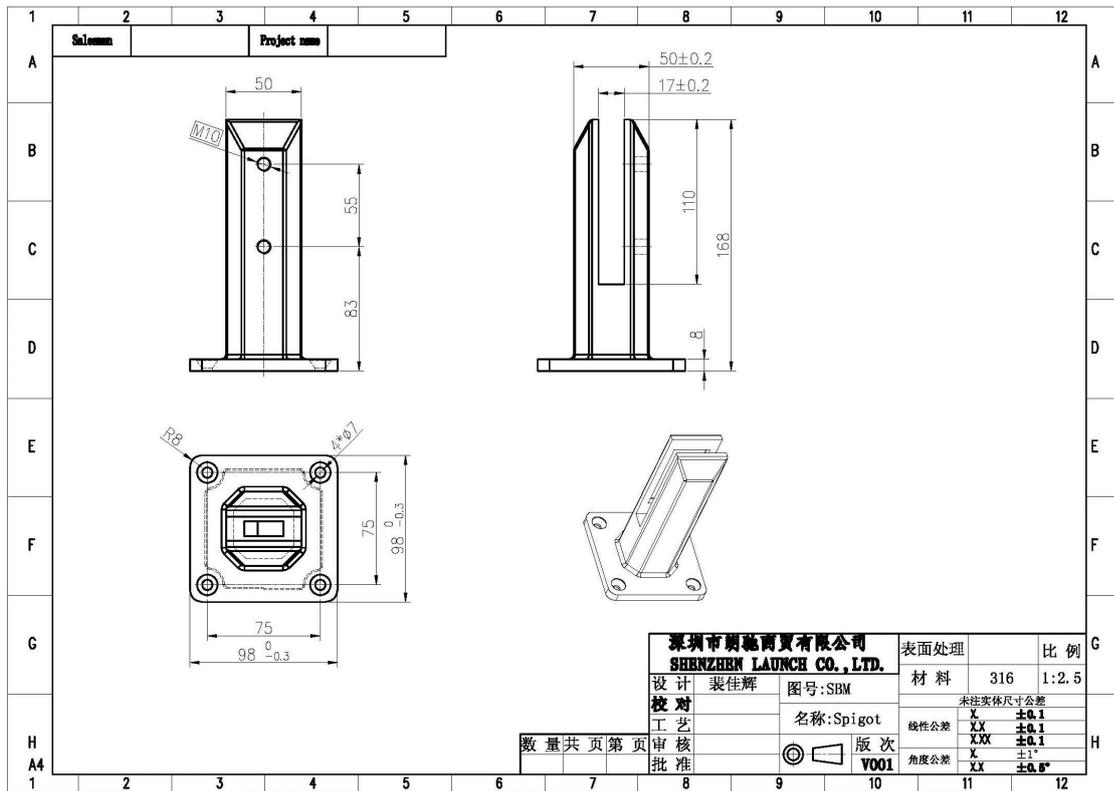

Rapporto di prova del 2205 Spigot in vetro materiale



12/16/2020 5:54:18 PM

Method: Fe-30

12/16/2020 5:54:09 PM

Comment: Cr-, Cr/Ni-steel

Type corr.concentr.

Type Standard 18--8

Sample Name:

Sample ID:

	C	Si	Mn	P	S	Cr	Mo	Ni
	%	%	%	%	%	%	%	%
< x > (1)	0.0224	0.8873	1.1010	0.0263	0.0032	21.6796	3.0718	5.5691

	Al	Co	Cu	Nb	Ti	V	W	Pb
	%	%	%	%	%	%	%	%
< x > (1)	< 0.0005	0.0797	0.1603	< 0.0002	0.0044	0.0893	0.0305	< 0.0002

	Sn	Sb	B	N	Fe			
	%	%	%	%	%			
< x > (1)	0.0092	< 0.0004	0.0024	0.1024	67.1600			


Guida all'installazione per spigot di vetro-



fixing method: base plate spigots

Mark out the centre line of proposed glass fence with a chalk line. Determine clamp location based on a sheet size (recommendation on pages 1 & 2). Use base plate as a template to mark out the hole positions and drill holes to suit.


Note: Do not exceed 100mm gaps between glass panels. Optimum gap is 40mm to 60mm

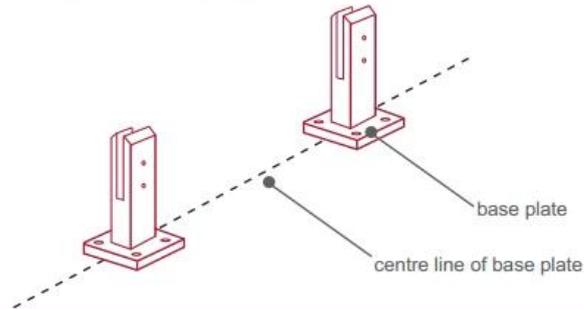

Now the base plated spigots can be fitted to the floor and plumbed via shims (not supplied) under the base plates. Be sure to tighten firmly as the smallest of movement at the base plate will result in noticeable movement at the bottom of the glass fence.


Tip: By setting the two outer spigots of your total span, a string line can be run in the 'throat' of the spigots, giving correct height for all spigots in between

Note: Do not exceed 100mm gap from the fixing surface to the bottom of the glass

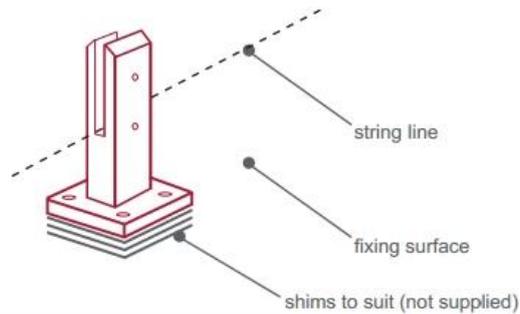

When all spigots are installed, slip domical cover the top of the spigot to hide fixings. It will be necessary to turn the adjustment screws on the spigot face all the way in to allow cover to pass over


Note: Same installation method applies to round base plate spigot

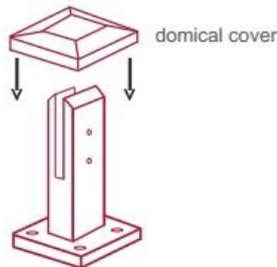


The glass is then installed to the spigots. Place plastic packers between glass & spigot, at no stage should glass touch the metal

How adjustability works:

1. Place glass in spigot
2. Fix/ tension glass both sides with allen key

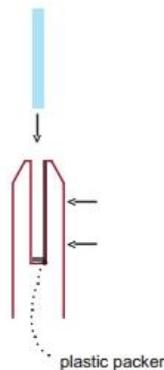

Spigot di vetro con lastra di livellamento di regolazione-

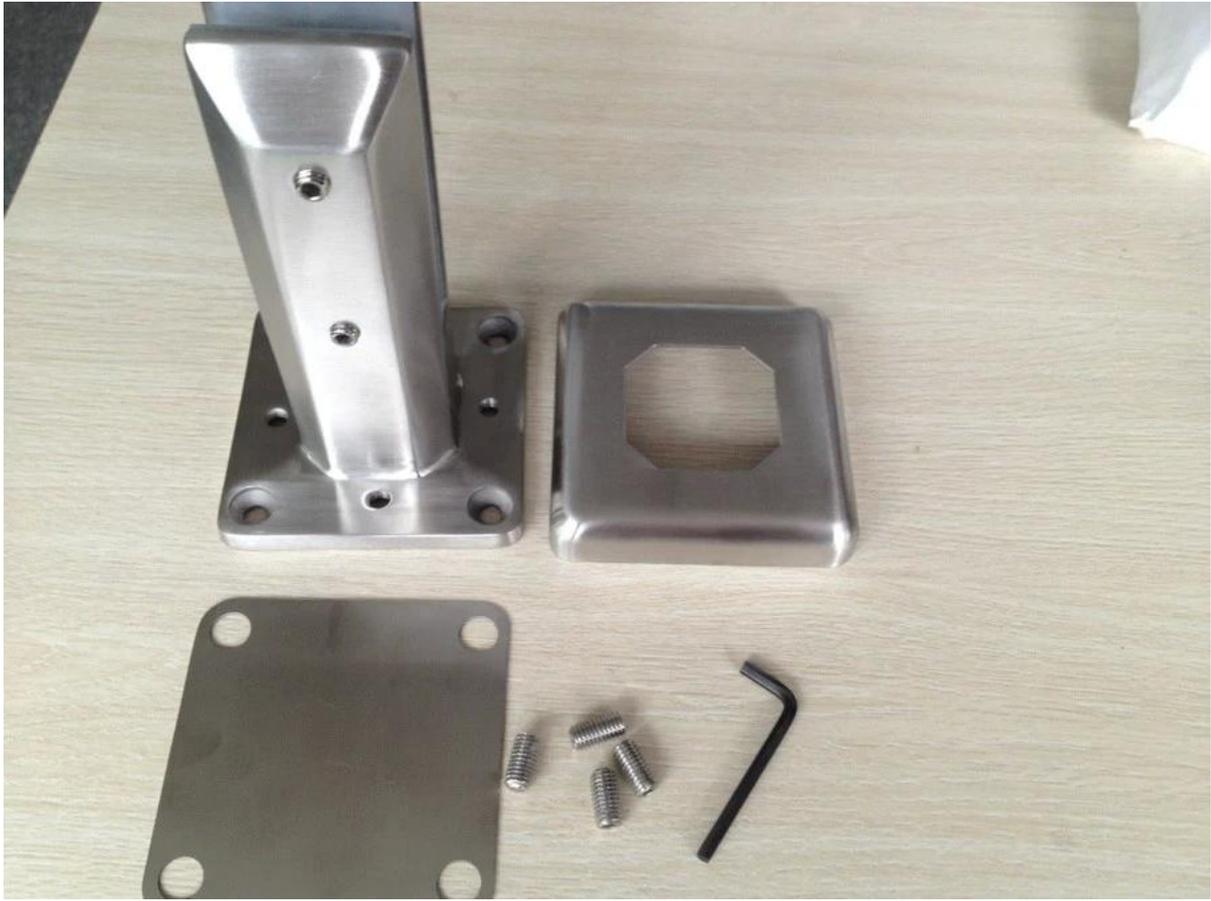




Gallerie di progetto di Spigot in vetro Duplex 2205 nero opaco per ringhiere in vetro senza telaio-







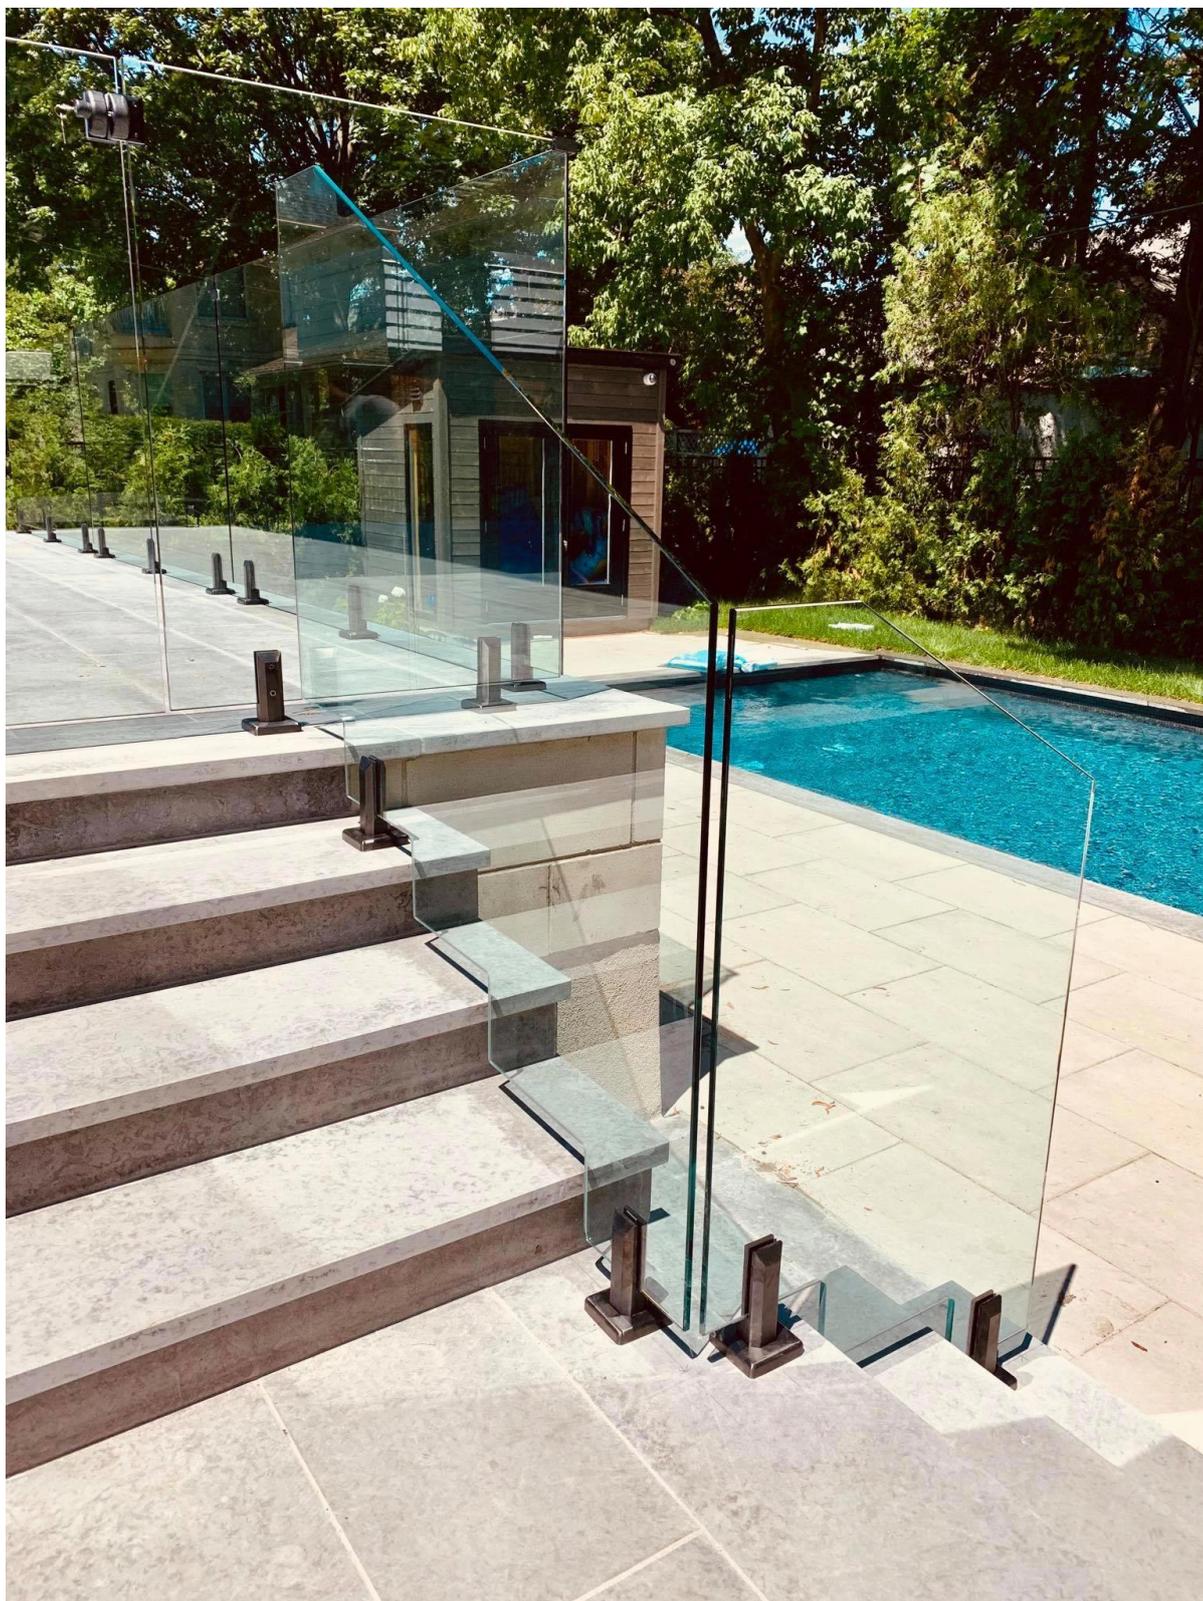

Contattaci ora per ottenere gli ultimi prezzi!