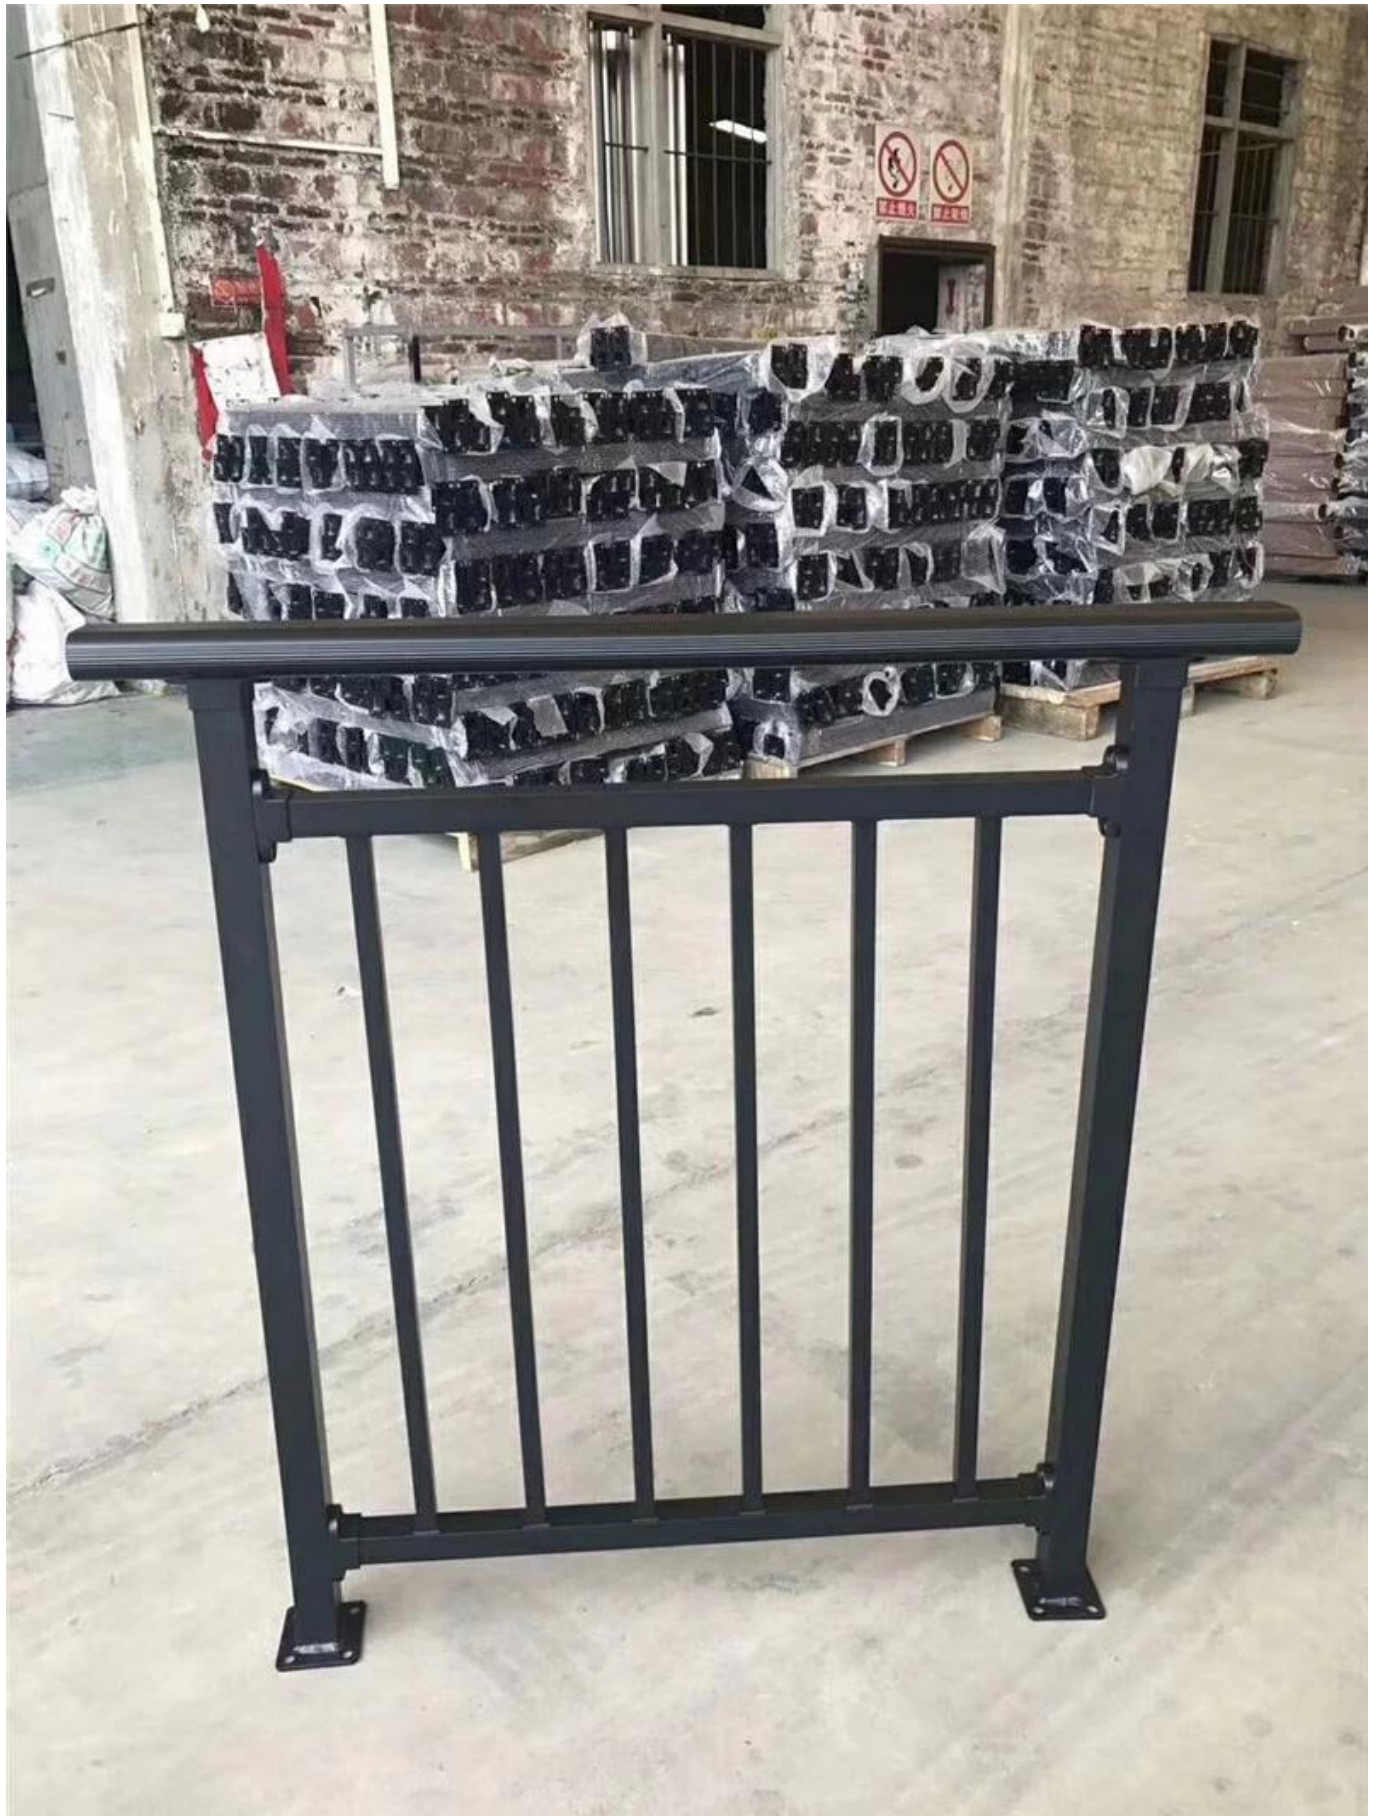


Shenzhen Launch vervaardigt eenvoudig te installeren zwart gepoedercoate zwart stalen architectonisch ontwerp voor buitenleuning. We bieden complete sets fittingen voor klanten om de installatie eenvoudig uit te voeren.

Kenmerken van de vangrailset voor buiten

Materiaal	Gegalvaniseerd staal
Af hebben	zwarte kleur poedercoating
Grootte	Top leuning 80 * 40 mm; 40 * 40 mm paal, 12 * 12 mm verticale rails, 32 * 32 mm middenrail
bijeenkomst	gemakkelijke DIY
MOQ	1 meter

Zwart stalen architectonisch ontwerp vangrailset voor buiten






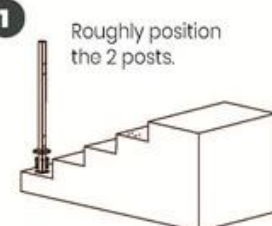


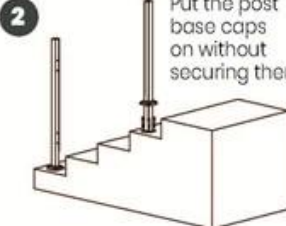
Montage-instructies Guard Rail


Guard Rail Assembly Instructions

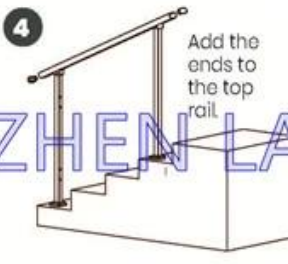
Tools Required: Electrical Power Drill
(Impact Drill Preferred)

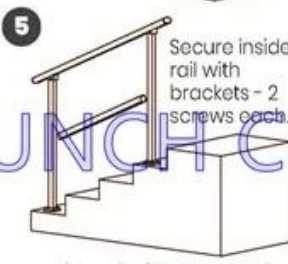
Overview: Assemble the rail and position it before marking holes for drilling. Improper installation can lead to failure of rail system or injury.

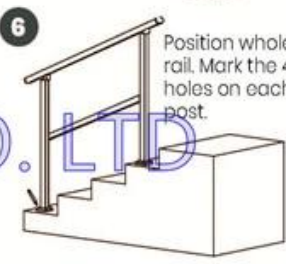
- 
- 


1 Roughly position the 2 posts.
 - 

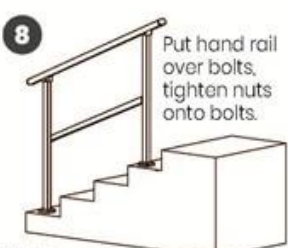
2 Put the post base caps on without securing them.
 - 


3 Secure top rail & post with brackets - 4 screws each.
 - 

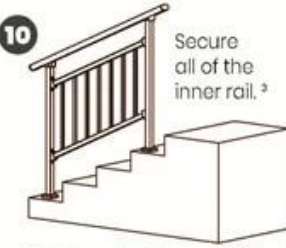
4 Add the ends to the top rail.
 - 

5 Secure inside rail with brackets - 2 screws each.¹
 - 

6 Position whole rail. Mark the 4 holes on each post.
 - 

7 Remove hand rail, drill holes straight down, and hammer in bolts.²
 - 

8 Put hand rail over bolts, tighten nuts onto bolts.
 - 

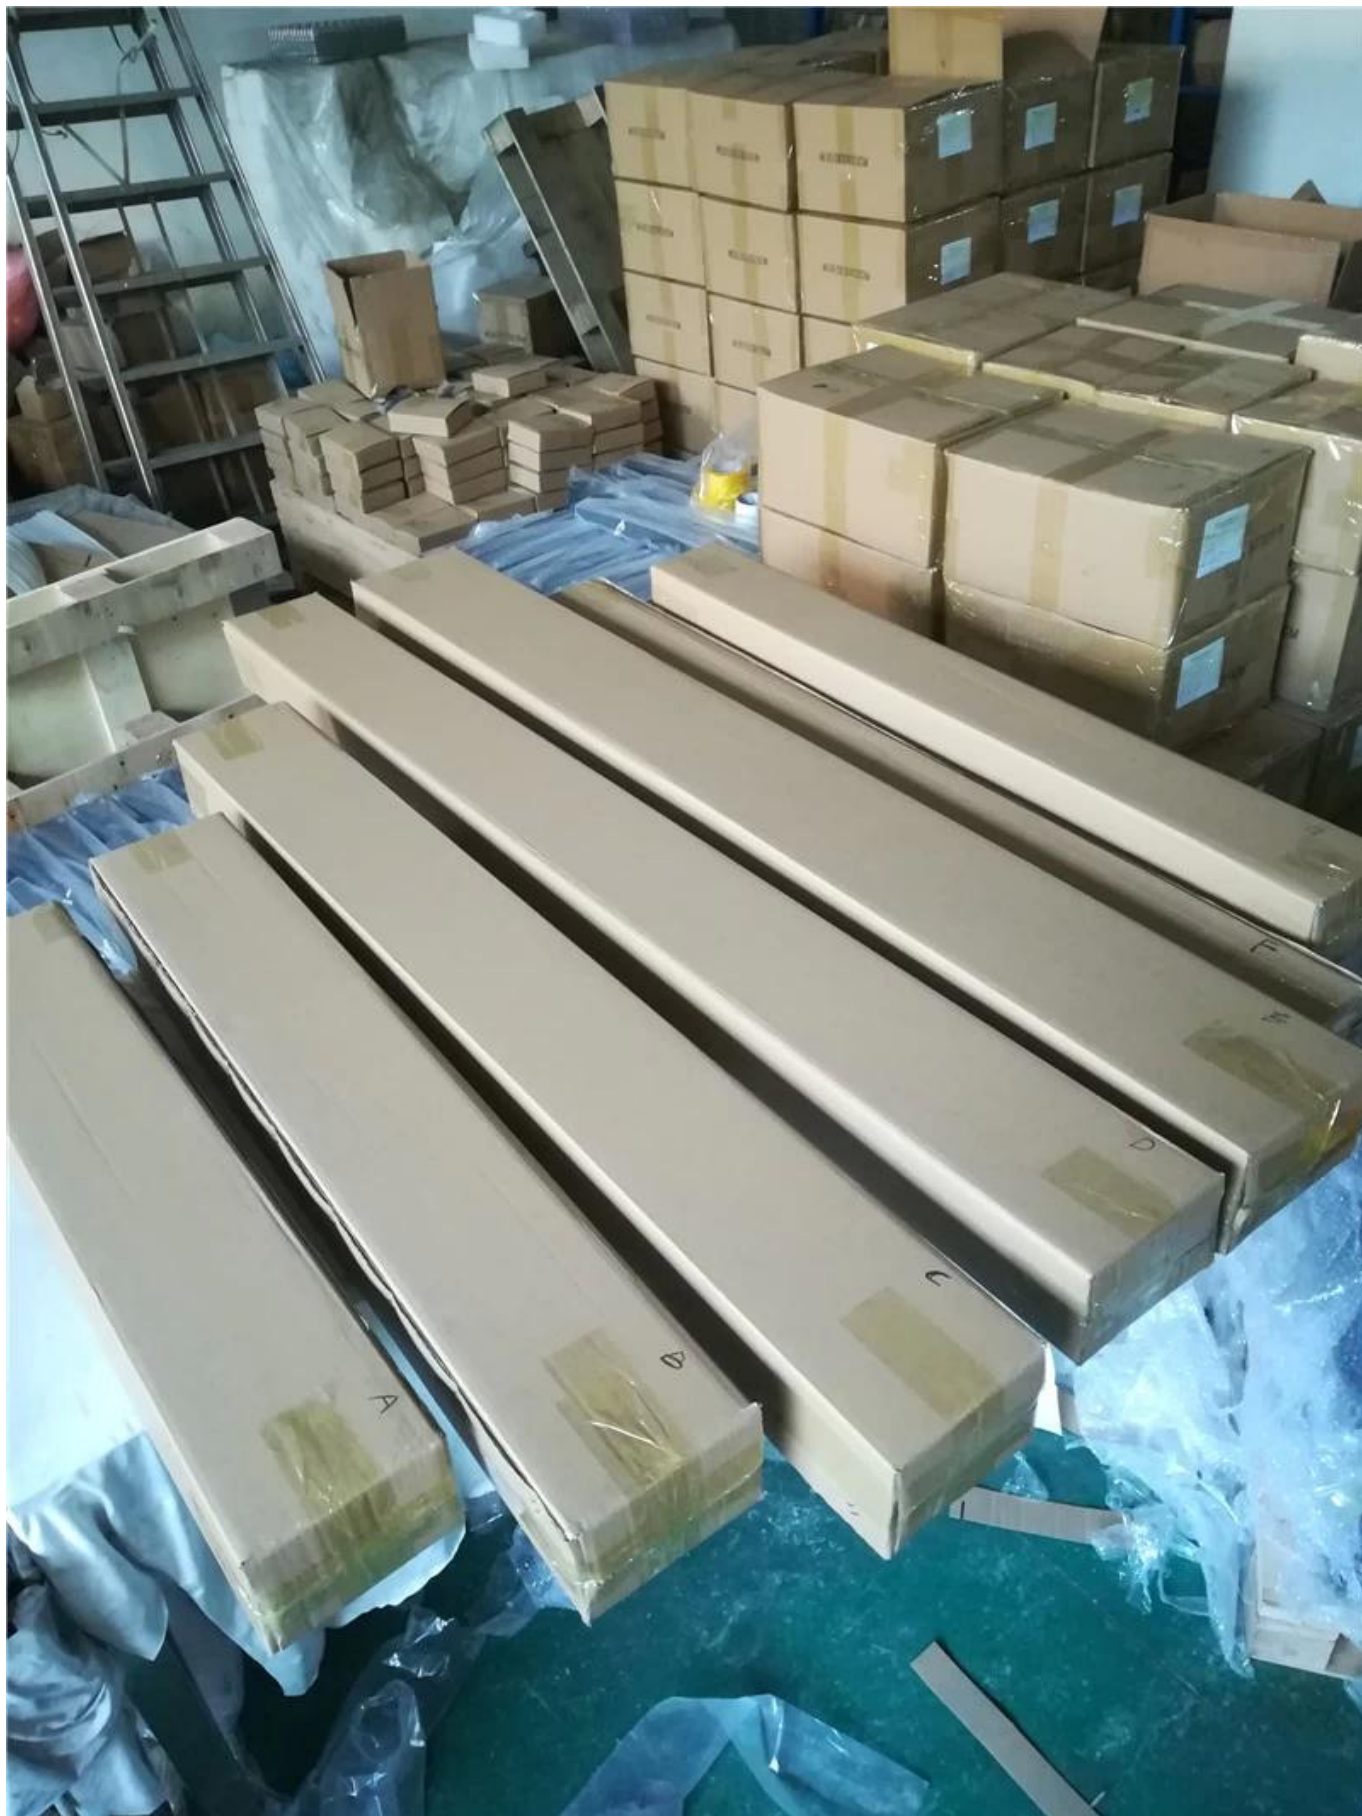
9 Insert the vertical railings.
 - 

10 Secure all of the inner rail.³
- ¹ Inside rail will be loose until each post is secured to the ground.
- ² Double check posts are parallel and tight against inside rail before marking holes for drilling.
- ³ Push and pull top rail & inside rail to ensure all is secure.

Productiefoto's van gegalvaniseerd stalen vangrail kit-

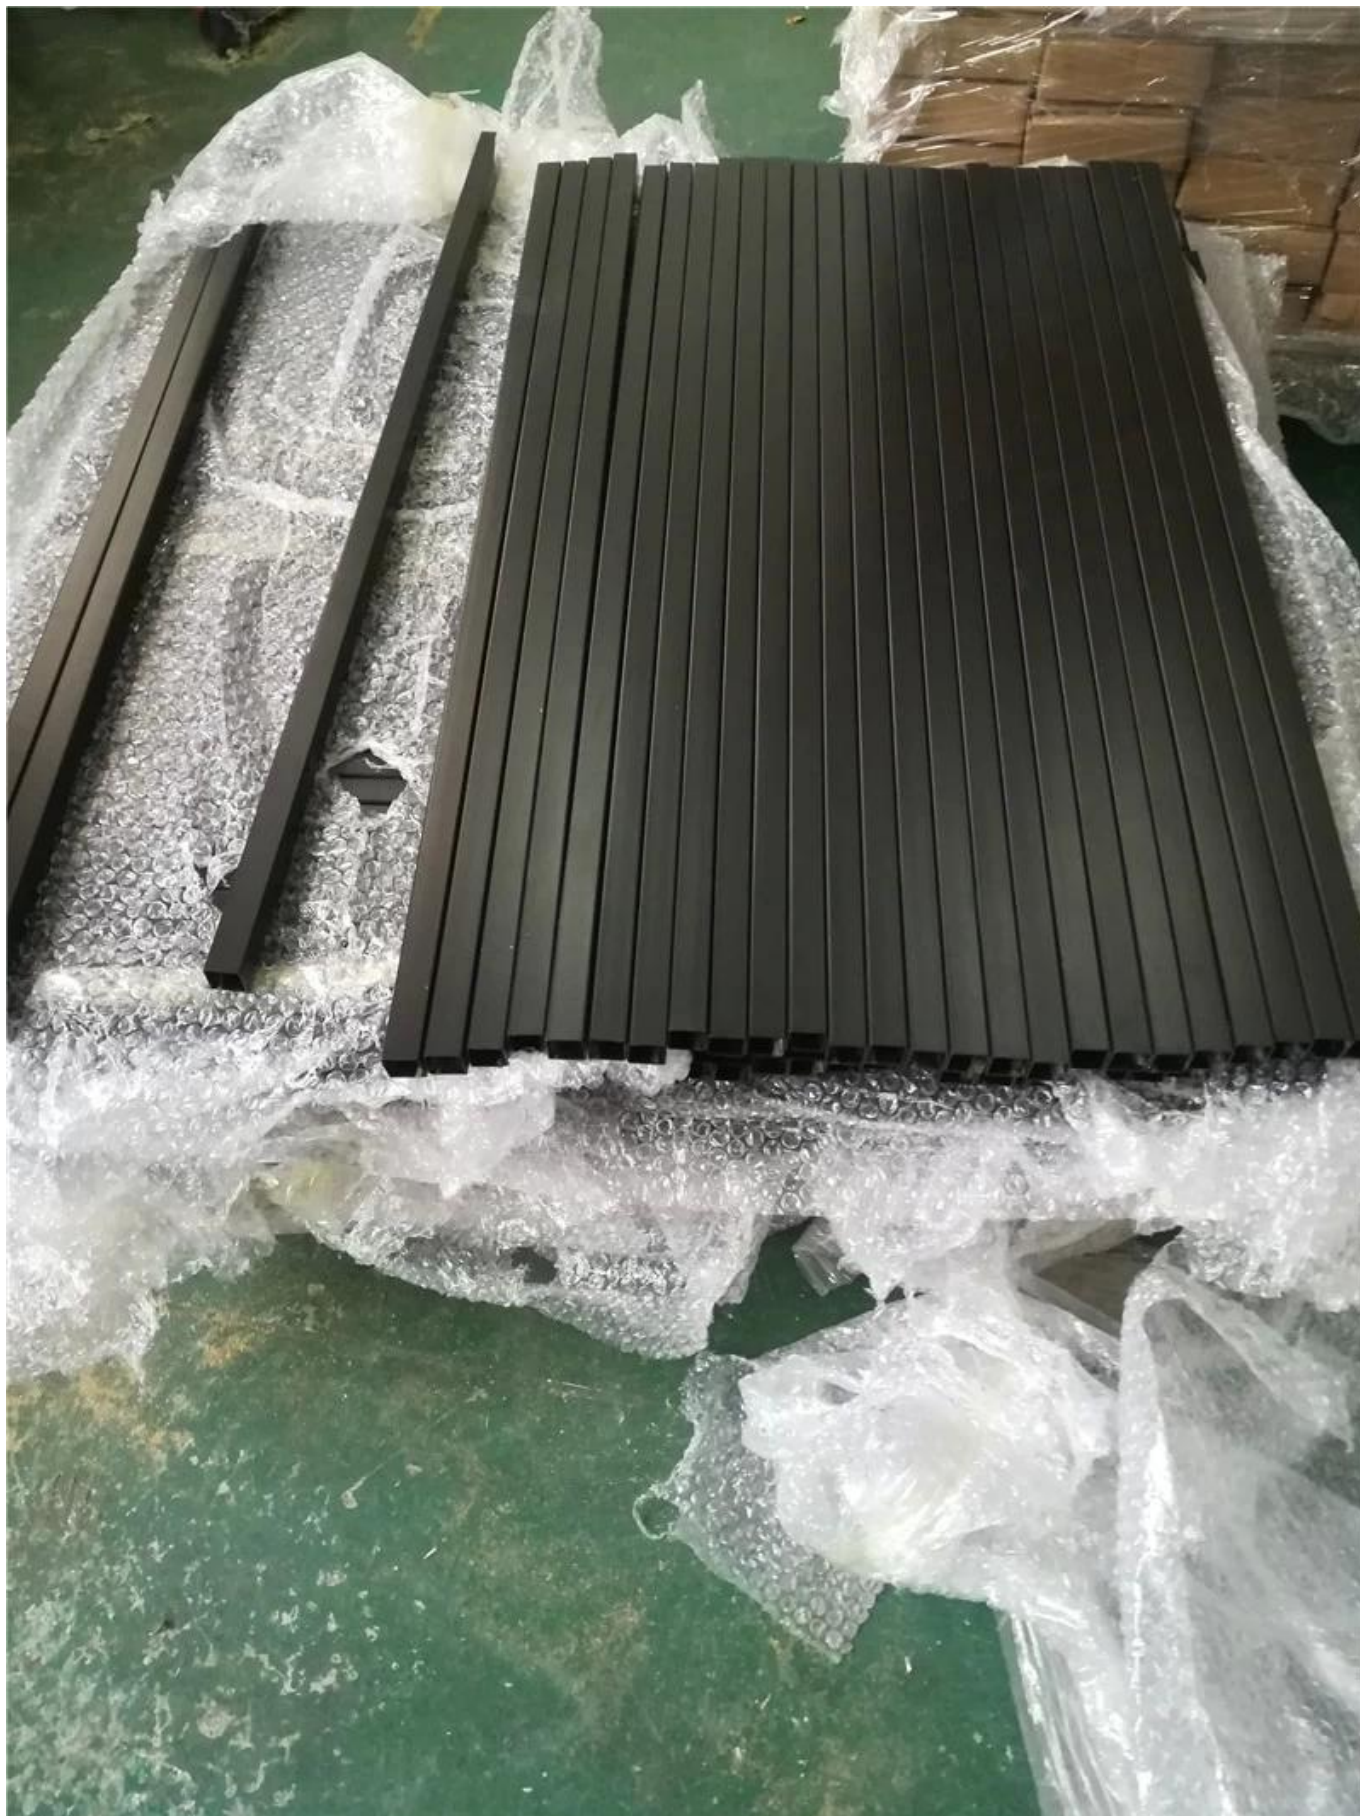




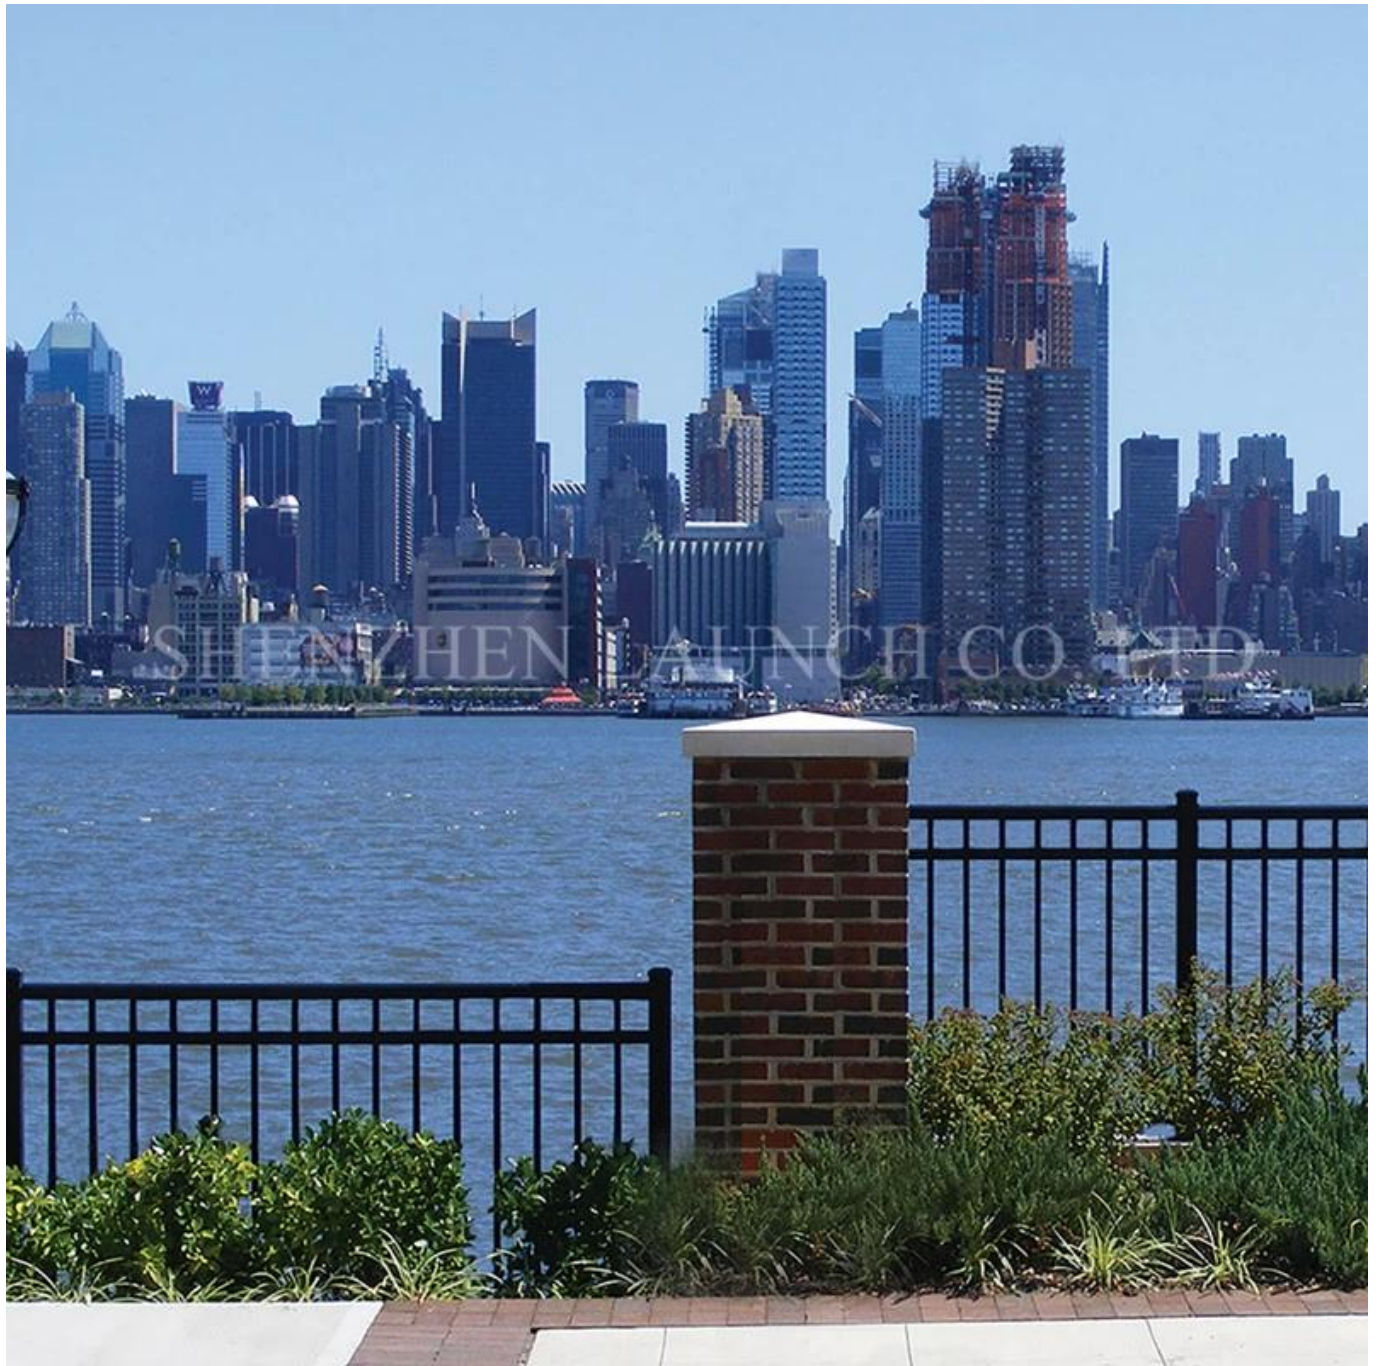








Guard Rail galerijen -





www.chinabalustrade.com

