


Modieuze exterieur leuning Baluster gelamineerd dek Balkon glazen reling ontwerp




| | | |
|---|------------------------|---|
| 1 | Materiaal en afwerking | Roestvrij staal 304/316; Satijn of spiegelaafwerking |
| 2 | Hoogte | 1000 MM / aangepast formaat |
| 3 | Stanchion Post | D50.8 * 1.5 (mm) buis; 4-voudig verstelbare bovenregelbeugel; Vierkante of ronde glasklem. |
| 4 | Bovenste rail | D50.8 * 1.5 (mm) holle buis |
| 5 | Beveiligingsrail | 10 mm / 12 mm gehard helderglazen paneel |
| 6 | Gebruik & Plaats | Baluster, Balustrade, Leuning, Hek, Leuning, Leuningen; Balkon, Brug, Dek, Tuin, Patio, Zwembad, Veranda, Trap, Terras |
| 7 | Installatie | Boven / zijkant gemonteerd |
| 8 | Pakket | EPE + binnendoos + doos |




LCH-106

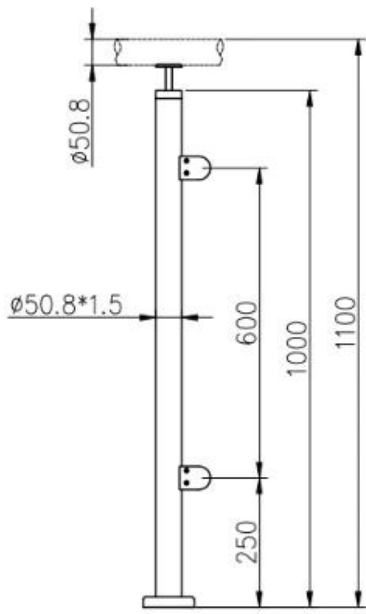

LCH-107

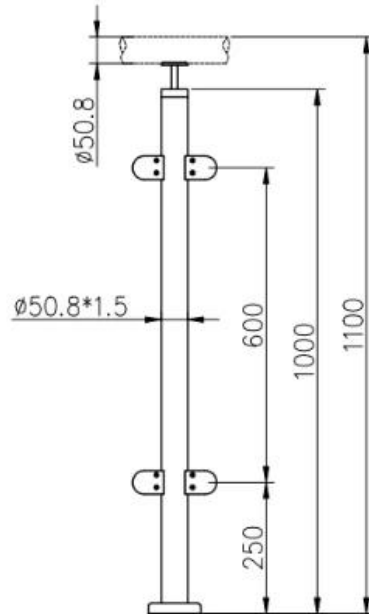

LCH-108

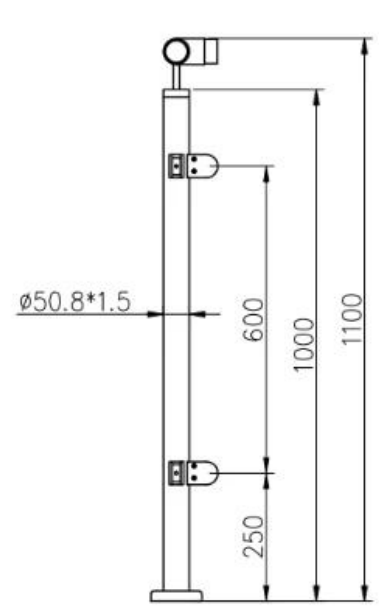

Installatie:

Glass Clamp Installation Guide



Mark and centre punch desired location of blind rivet nut location.



Drill centre punched hole in tube to suit blind rivet nut.



Insert blind rivet nut into tube and fasten with blind rivet tool.



Check installed blind rivet nut is secure and ready for install.



Align half glass clamp with blind rivet nut inline position. Screw in button head cap screw into thread and tighten with hex key.



Select appropriate rubber gasket to suit glass panel thickness. Install rubber gasket into both sides of glass clamp. (Note rubber gasket marked with sizes).



If heavier clamping load is required please use supplied glass clamp pin, during the install process. Note glass panels will require drilling in order to fit glass clamp pins.




Fit glass panel into position, install second half of glass clamp secure with provided hex screws.





Tighten glass clamps with hex key, and check glass panel are secure with no movement.

Project show



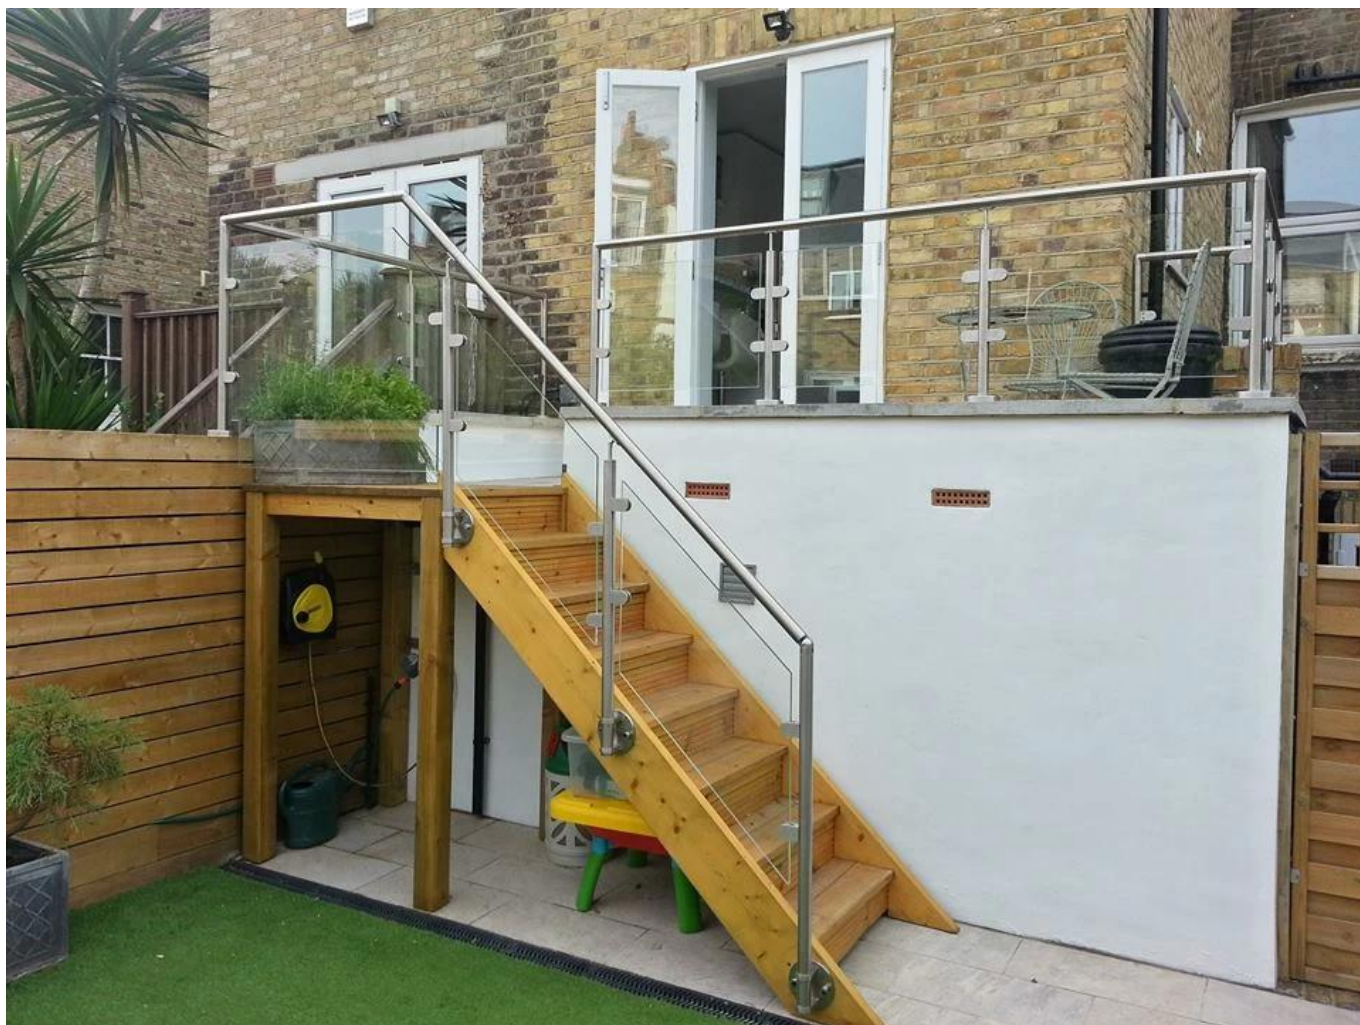

Voor balkon traliewerk ontwerpen:

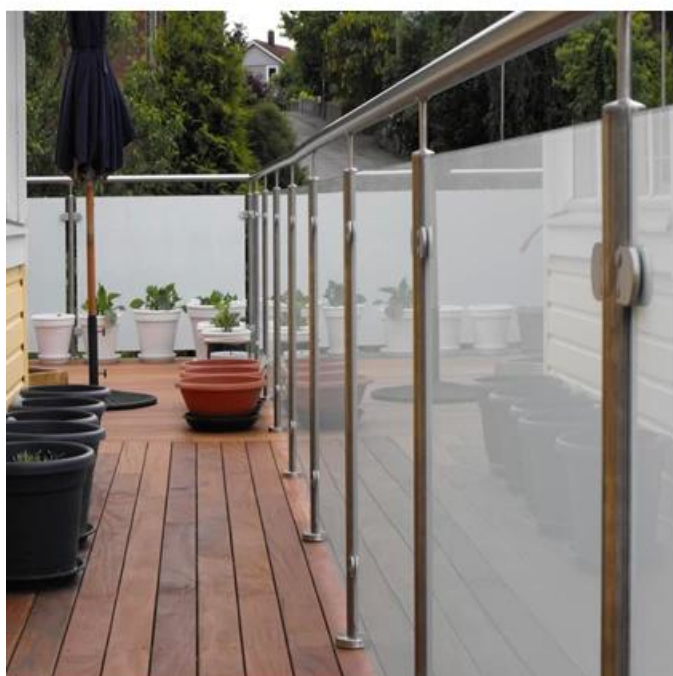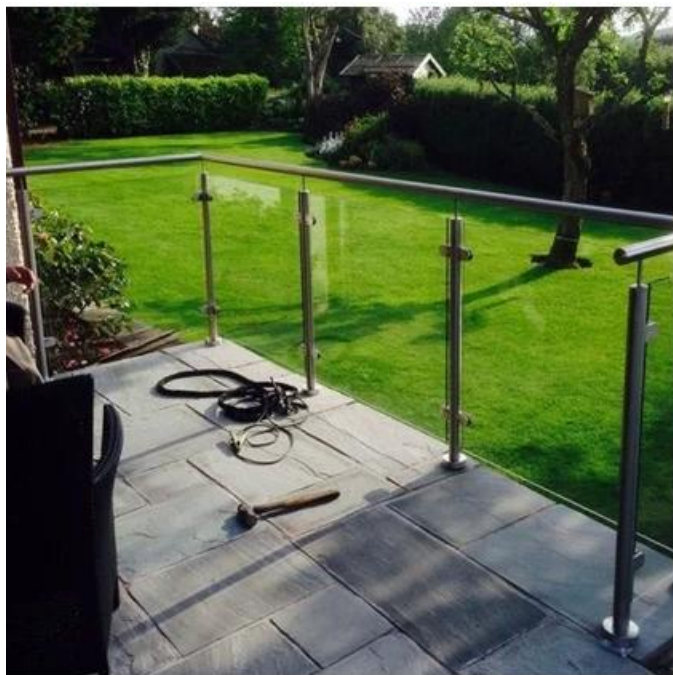

**Welkom bij contact ons:
Eve Chow
sales03@launch-china.cn
HP / WhatsApp / WeChat: +8613686807796**