## High quality Duplex 2205 materail glass spigot for glass fencing

Glass spigot quick details

Material: Duplex 2205

Model No: SBM

Finish: mirror or satin

Use for 10-13.52mm glass






Glass spigot with base cover





Glass spigot drawing

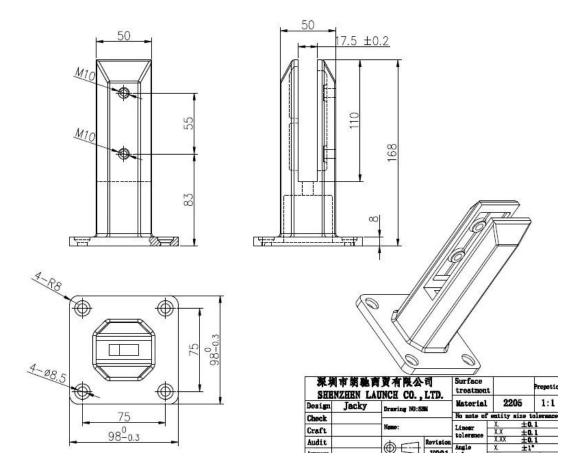

## Glass spigot installation:



## fixing method: base plate spigots


Mark out the centre line of proposed glass fence with a chalk line. Determine clamp location based on a sheet size (recommendation on pages 1 & 2). Use base plate as a template to mark out the hole positions and drill holes to suit.

Note: Do not exceed 100mm gaps between glass panels. Optimum gap is 40mm to 60mm

Now the base plated spigots can be fitted to the floor and plumbed via shims (not supplied) under the base plates. Be sure to tighten firmly as the smallest of movement at the base plate will result in noticeable movement at the bottom of the glass fence.

Tip: By setting the two outer spigots of your total span, a string line can be run in the 'throat' of the spigots, giving correct height for all spigots in between

Note: Do not exceed 100mm gap from the fixing surface to the bottom of the glass

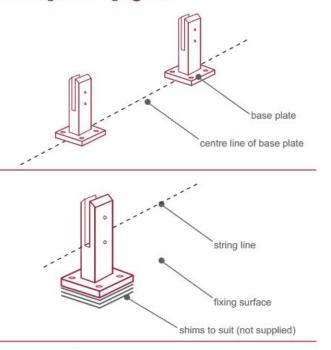


When all spigots are installed, slip domical cover the top of the spigot to hide fixings. It will be necessary to turn the adjustment screws on the spigot face all the way in to allow cover to pass over

Note: Same installation method applies to round base plate spigot

domical cover

The glass is then installed to the spigots. Place plastic packers between glass & spigot, at no stage should glass touch the metal How adjustability works:

- Place glass in spigot
  Fix/ tension glass both sides with allen key



## Glass spigot application:



For more details please feel free to send email to <a href="mailto:sales05@launch-china.cn">sales05@launch-china.cn</a>. Thank you!