

# **Modern Powder Coated Wrought Iron Terrace Balcony Railing Factory Designs**

## **Product Description**

### **Product show**





## Installation

# Guard Rail Assembly Instructions


**Tools Required:** Electrical Power Drill  
(Impact Drill Preferred)

**Overview:** Assemble the rail and position it before marking holes for drilling. Improper installation can lead to failure of rail system or injury.

- 1 Roughly position the 2 posts.
  - 2 Put the post base caps on without securing them.
  - 3 Secure top rail & post with brackets - 4 screws each.
  - 4 Add the ends to the top rail.
  - 5 Secure inside rail with brackets - 2 screws each.<sup>1</sup>
  - 6 Position whole rail. Mark the 4 holes on each post.
  - 7 Remove hand rail, drill holes straight down, and hammer in bolts.<sup>2</sup>
  - 8 Put hand rail over bolts, tighten nuts onto bolts.
  - 9 Insert the vertical railings.
  - 10 Secure all of the inner rail.<sup>3</sup>
- <sup>1</sup> Inside rail will be loose until each post is secured to the ground.
- <sup>2</sup> Double check posts are parallel and tight against inside rail before marking holes for drilling.
- <sup>3</sup> Push and pull top rail & inside rail to ensure all is secure.



## Production and Packing



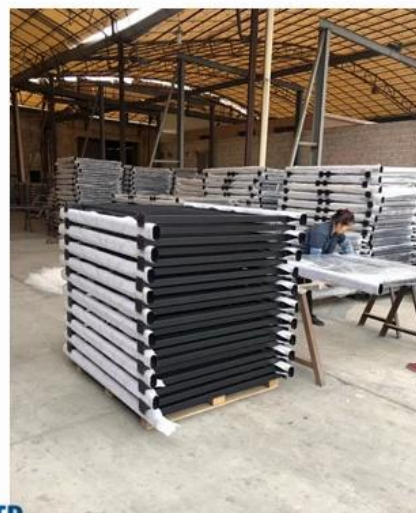

## Application



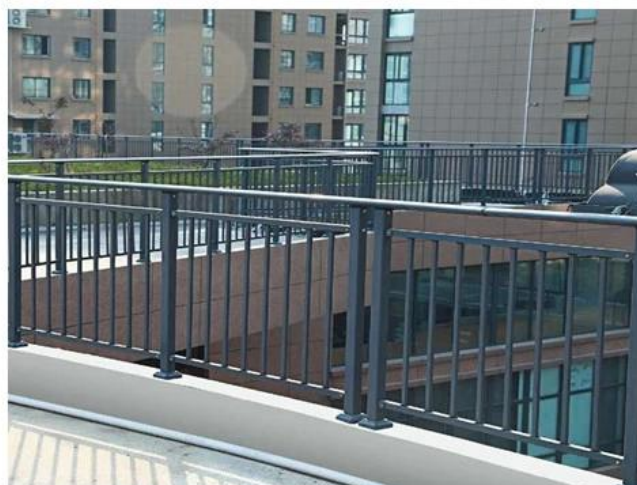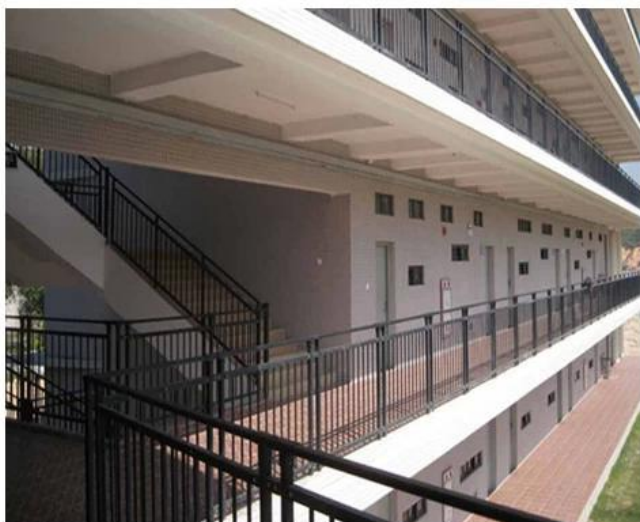

## Contacts

**Thank you for visiting!**

**Need quote or any questions, please leave a message. We will get back to you within 24 hours.**

**For any urgent inquires, please get in touch below:**

**Wendy e-mail: [sales04@launch-china.cn](mailto:sales04@launch-china.cn)**

**Mob/What's APP: +86 15989339827**