


1.Description


- Material: stainless steel 304/316
- Usage: glass to wall/ square post/round post
- Size: please see below drawing
- For glass thickness: 8-12mm

2. Product picture


Size

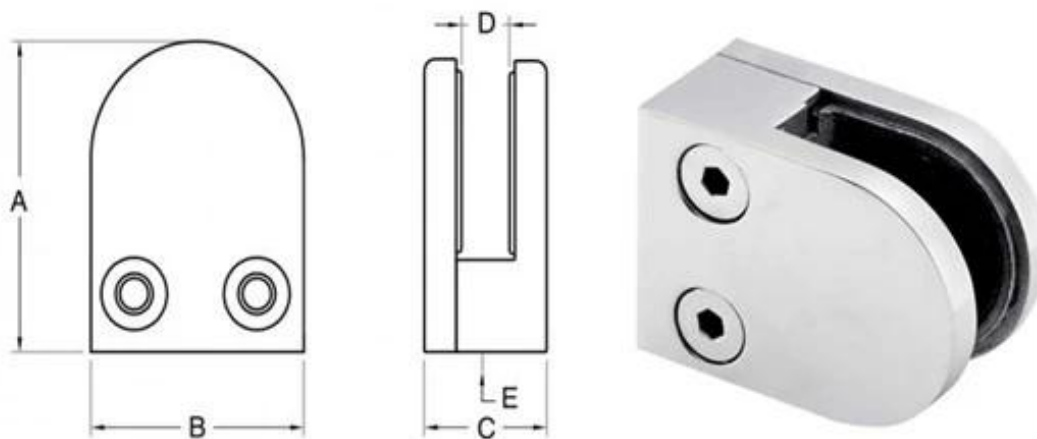

| Item No. | A | B | C | D |
|---------------------------|----|----|----|----|
| G103 | 50 | 40 | 22 | 8 |
| G104 | 50 | 40 | 26 | 12 |
| G105 | 54 | 45 | 28 | 14 |
| Suitable for 6-12mm glass | | | | |

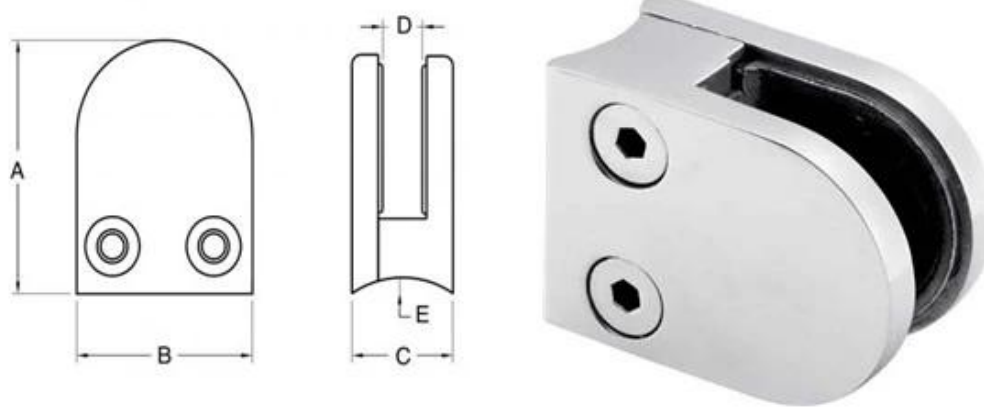

| Item No. | A | B | C | D | E |
|---------------------------|----|----|----|----|--------|
| G103R | 52 | 40 | 22 | 8 | R-21.5 |
| G104R | 52 | 40 | 26 | 12 | R-21.5 |
| G105R | 58 | 45 | 28 | 14 | R-25.4 |
| Suitable for 6-12mm glass | | | | | |

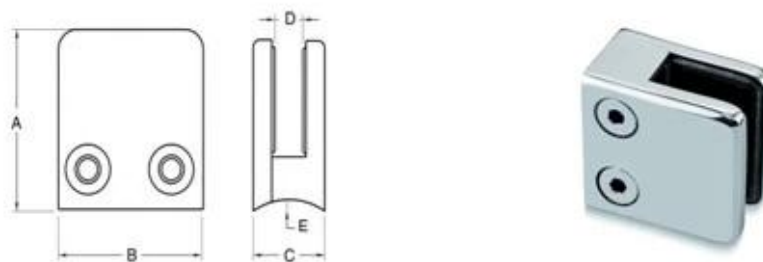

| Item No. | A | B | C | D | E |
|---------------------------|----|----|----|----|--------|
| G101 | 51 | 41 | 25 | 11 | 0 |
| G101R | 55 | 41 | 25 | 11 | R-21.5 |
| G102 | 44 | 44 | 25 | 11 | 0 |
| G102R | 48 | 44 | 25 | 11 | R-21.5 |
| Suitable for 8-10mm glass | | | | | |

G106R for 8-10mm glass





G106R



side down



side up



front



bottom

G102 for 8-12mm glass (with pin inside and without pin both available)



For thicker glass 10-12mm , G105



Details










New design big size glass clamp for 12-15mm glass for 90 degree corner.

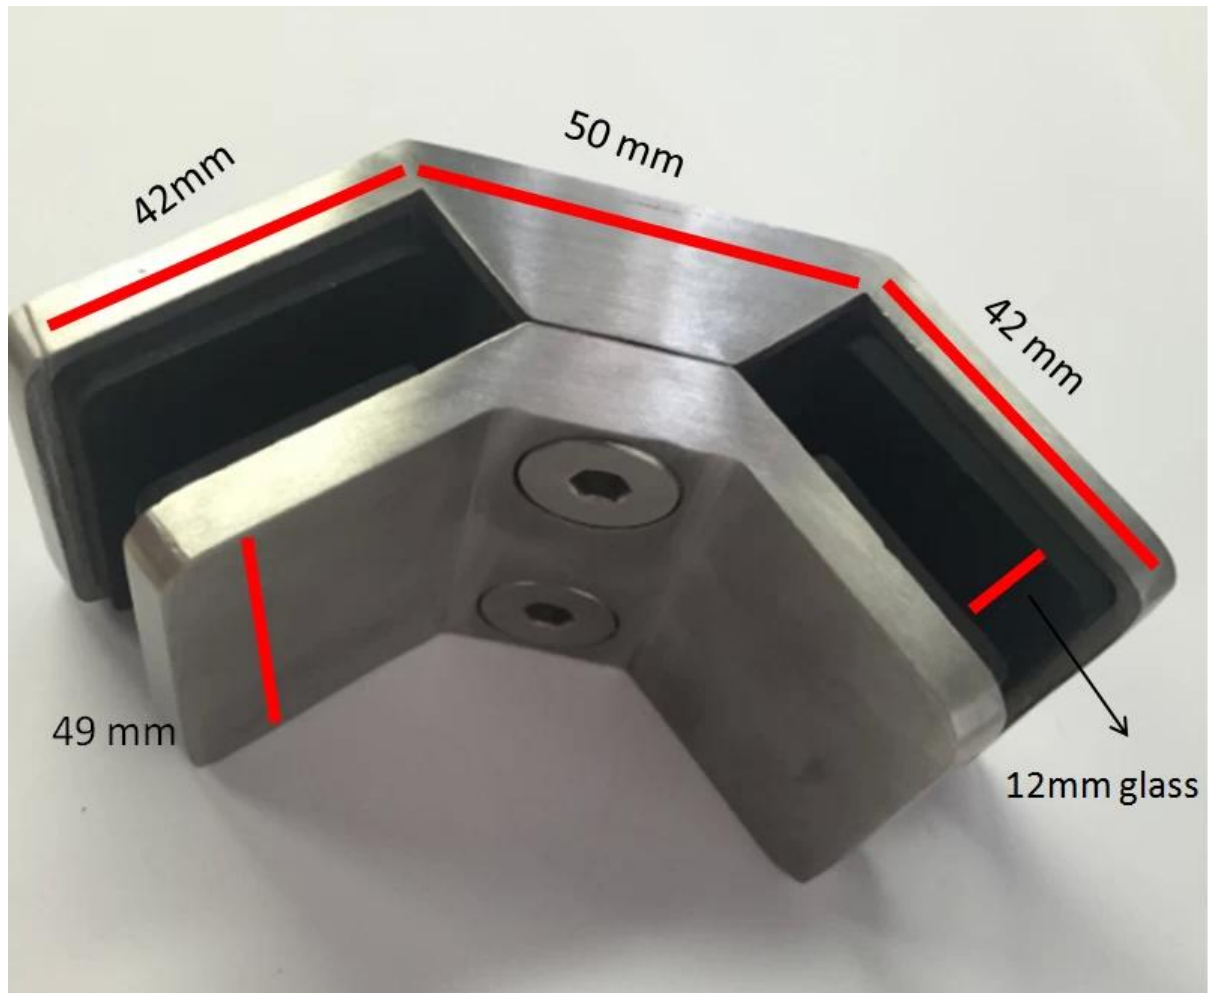

Installation


Glass Clamp Installation Guide



Mark and centre punch desired location of blind rivet nut location.



Drill centre punched hole in tube to suit blind rivet nut.

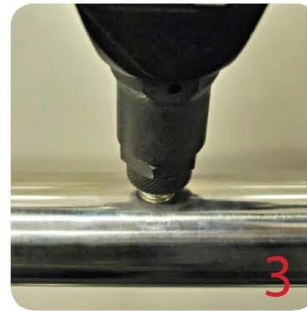

Insert blind rivet nut into tube and fasten with blind rivet tool.



Check installed blind rivet nut is secure and ready for install.



Align half glass clamp with blind rivet nut inline position. Screw in button head cap screw into thread and tighten with hex key.



Select appropriate rubber gasket to suit glass panel thickness. Install rubber gasket into both sides of glass clamp. (Note rubber gasket marked with sizes).



If heavier clamping load is required please use supplied glass clamp pin, during the install process. Note glass panels will require drilling in order to fit glass clamp pins.



Fit glass panel into position, install second half of glass clamp secure with provided hex screws.



Tighten glass clamps with hex key, and check glass panel are secure with no movement.









3.Delivery & Packing

Delivery: 3-5 days by express. 10-15 days by shipping

Packing: one pc into one plastic bag. 10 pcs into one box.

Lead time: about 20 days after payment. (It depend on quantity)



| | |
|----------------------|--|
| packing | plastic bag+box+carton |
| production lead time | 30-45 days ; also depending on your qty. |
| Shippment |   |
| |   |
| |   |
| payment |   |

4. Factory & Certification





5. Customers





**build &
renovating
expo**

Friday 4 July - Sunday 6 July 2014
Melbourne Exhibition Centre



6.Contact



董 萍 Doris Dong

Senior Sales Representative

☎ (86) 135 3050 6265

深圳市南山区南山大道1092号亿利达大厦B区3栋5003

Room 5003, Building 3, Yilida Building, No.1092
Nanshan Road, Nanshan District, Shenzhen, China
postal code 518054

☎ (86-755) 8603 7559

☎ (86-755) 8637 2611

✉ sales04@launch-china.cn

💻 www.launch-china.com

www.chinabalustrade.com

Thank you for visiting. Please do not heasite to contact us for factory direct price and professional advises.