

Vidro Spigot SBM Introdução:



SBM

Dimensão:

Altura: 168MM;

Largura: 50mm rodada;

Altura do alojamento: 110mm;



Groove para baixo: 58 milímetros;

Diâmetro da base: 98mm;

Placa de cobertura de diâmetro: 100mm;

2 x M8 grub screws, SS316 pressure plate, special high quality borracha de silicone junta.

100mm diameter dress ring/ cover plate to suit the round spigot for hiding visual fixings (cover plate must be used with installation).

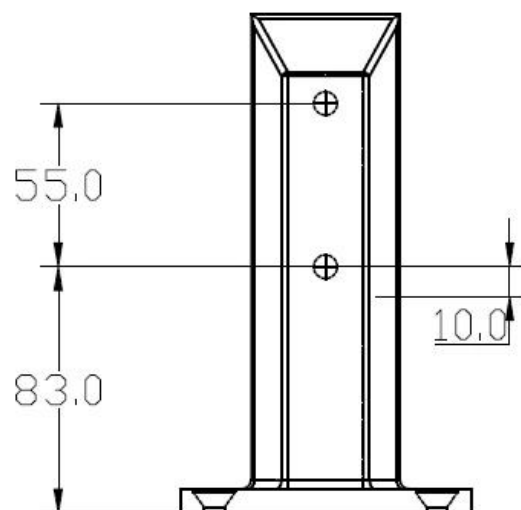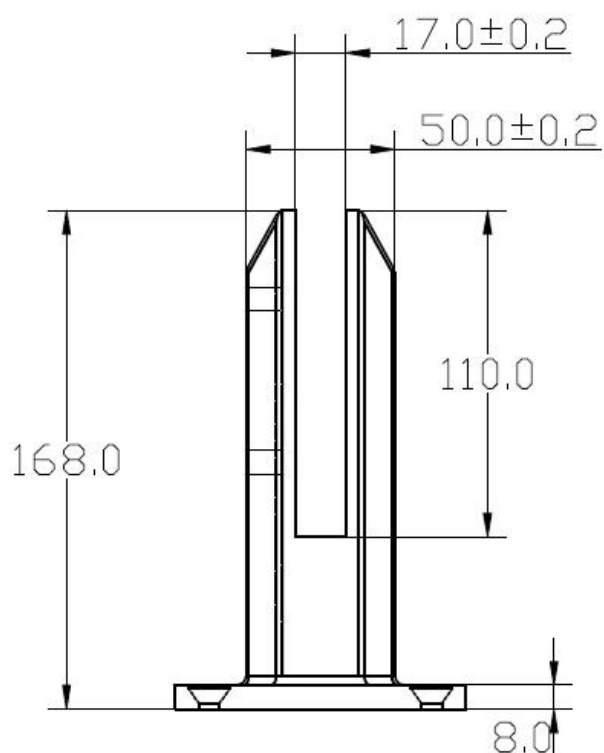


Material:

Marine grade 316 Stainless Steel material to maximize the products life and appearance. This premium quality material is low carbon, anti ferrugem - tough, durable, excellent resistance to corrosion, suitable for outdoor uses.

Superfície:

Finished with a fantastic high quality mirror polished finish.

Baixar [Vidro torneira SBM desenho técnico](#) Aqui.

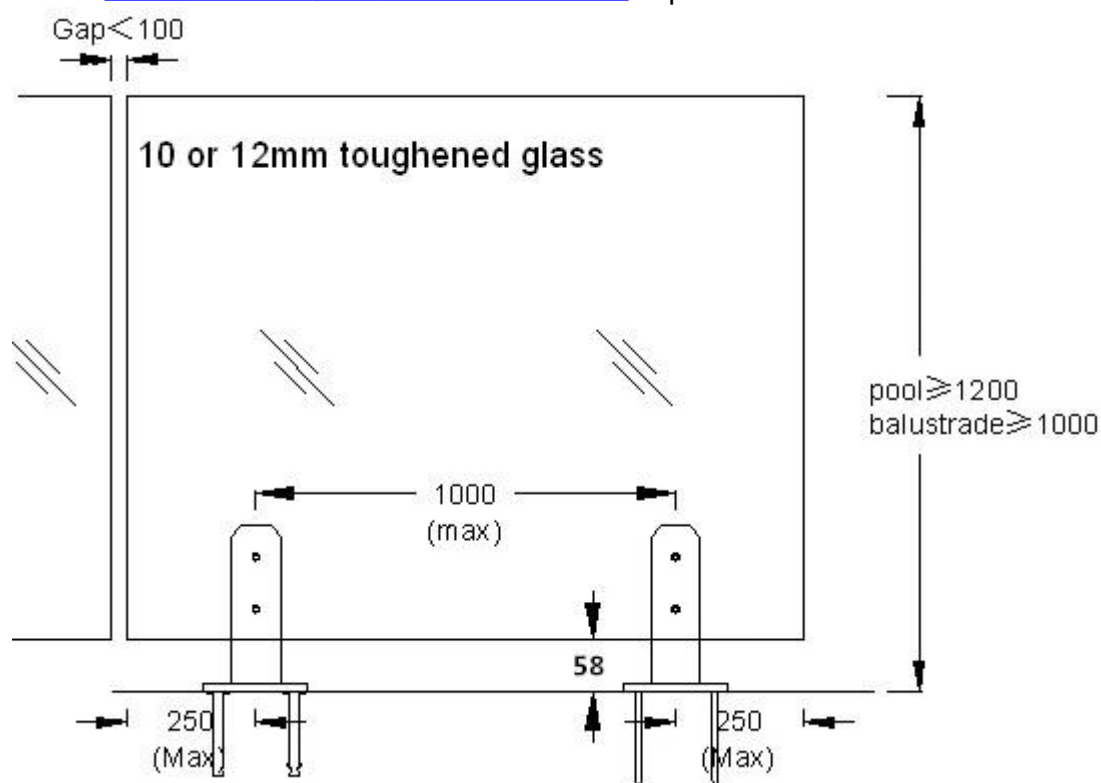

Vidro Spigot SBM Matéria:

- 1.Strong friction clamping system for NO HOLE glass, quick and easy to DIY Install. You can put as many clamps as you like along larger panels of glass.
- 2.Glass torneiras são de aço inoxidável sólido! Não oco!
- 3.Suits 10 OR 12 milímetros vidro temperado.
- 4.Designed and manufactured according to to Australian Standard for swimming pool fencing safety, Australia Balustrade Standard AS& NZS.

Vidro Spigot SBM Aplicação:

Stainless steel glass spigots used for fixing glass of swimming pool fencing walls for outdoor living, antirust and very durable.

Nice-

looking mini posts apply to support 10 or 12mm fully frameless glass for fence in home & garden.

Glass gator clamps for the construction of glass handrails for a beautiful stair balustrade or balcony.

Vidro Spigot SBM Instalação DIY:

- 1.Mark fora da linha de centro de vidro cerca proposto.
- 2.Determine spigot location and mark out the hole positions, drill the required holes.
- 3.Bolt the base plated spigot into position using the expansion screws for concrete/pavings/tiles or timber screws for wooden decking.
- 4.Fit a placa de cobertura antes da instalação de vidro sem moldura.
- 5.Install the glass to the spigots and tighten the clamp with supplied Allen key.

Vidro Spigot SBM Embalagem:

Each glass spigot with 1 cover fitted is wrapped up with one air foam bag to protect from scratches.

Each spigot with foam bag is put into 1 carton box.

4 parafusos de expansão pcs e

4 sets timber screws for installation wrapped by thick rubber hose is put together with 1 spigot.

4 pequenas caixas são embaladas em uma caixa de papelão grande.

1 set installation tool allen keys free supplied in 1 big box.

Each big carton box is individually wrapped up with wrapping film & packing tapes.