Пескоременные стеклянные перила с дуплексными стеклянными стеклянами 2205 на 10 мм до 13,52 мм стеклянные панели.

Наш регулируемый дуплекс 2205 стеклянный SPIGOT состоит из 4 дополнительных небольших отверстий и винтов на базовой пластине и 1 штриховой пластиной на выравнивании PC, которая будет использоваться в нижней части SPIGOT, чтобы регулировать уровень, когда земля даже не.

1. Особенности стеклянных перил с дуплексом 2205 стеклянные патологи

Материализпапигоосновнойтело	Дуплекс 2205.
Материал для винтов, базовой крышки, выравнивающей пластины	316 нержавеющая сталь
Заканчивать	Матовое черное порошковое покрытие или электроплетение; сатин; зеркало
Толщина стекла	10-13,52 мм толщина стекло
Высота	168 мм; или может быть настроен
Пластиковая прокладка	Изготовлен из нейлонового материала, он может длиться от времени пожизненного времени
Бетонный болт в костюм	M8 * 100.
Единый вес на ПК	1,45 кг
В наличии	да
MOQ	2 шт

2Габаритные размерыизСовокупностьстеклопарусный

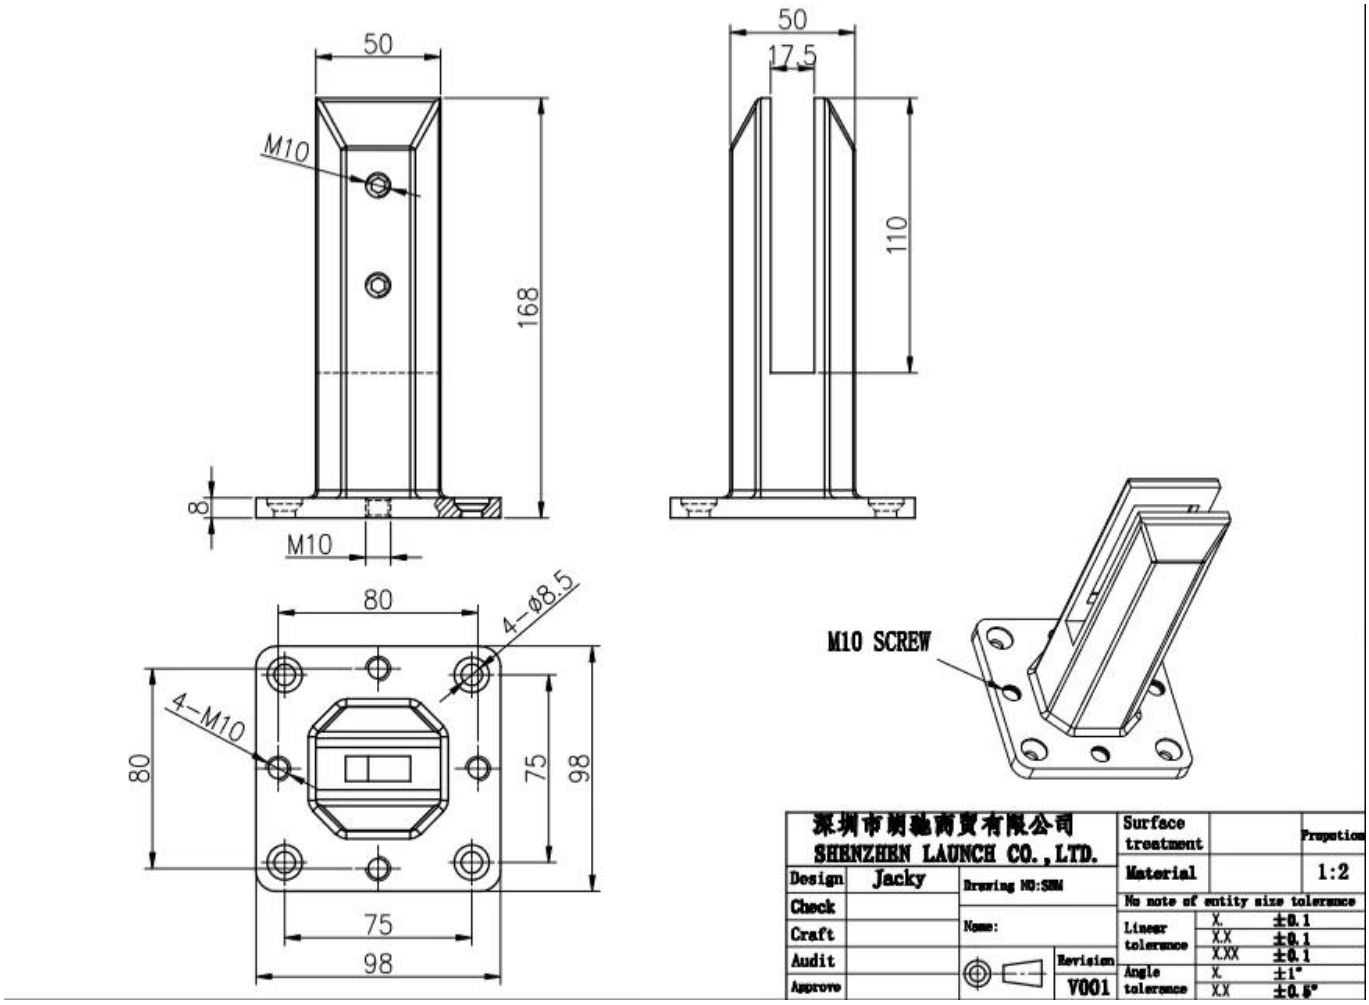

3Загрузкаконтрольная работаИ материалконтрольная работадляSBM Duplex 2205.стеклопарусный

LOADING TEST FOR SBM

Introduction

MTS Metallurgical Testing Services was engaged to witness the installaton of a sample pool fence spigot and to subsequently conduct load tests on the spigot to the requirements of Australian Standard AS1926.1 - 2012.

Standard/Specification AS 1926.1 - 2012, Section 3.2 and Appendix B

Results Summary
(For details of individual tests, refer to the tables on the following pages.)

ID	Item/Heat No.	Dimensions/Type/Details	Finish	Overall Assessment
14117/01	SSRM316	50mm Square, Base Plate 316 Stainless steel	316l	COMPLIES

Remarks

After completion of the testing, the spigot was found to be in sound condition with no breakage, tearing or signs of fracture and no loosenss of the fixings.

Colin Cochran
Metallurgical Testing Manager

NATA **Accreditation No: 15624**
Accredited for compliance with ISO/IEC 17025

Strength Test

Test Specification AS 1926.1 - 2012, Appendix B Test Procedure MTS-TP3.1 Compression Tests - Products

Specimen ID	Observations	Assessment
14117/01	Test Equipment: Hydraulic ram and 10,000 N load cell Test Load: 330N Load Duration: 45 Secs Deflection uncer load: 1 mm Permanent Deflection after removal of test load: 0 mm	COMPLIES

Requirements No permanent damage or loosening of fixings.

SPECTRO

12/16/2020 5:54:18 PM

Method: Fe-30
Comment: Cr-, Cr/Ni-steel
Type corr.concentr.
Type Standard 18--8
Sample Name:
Sample ID:

12/16/2020 5:54:09 PM

	C	Si	Mn	P	S	Cr	Mo	Ni
	%	%	%	%	%	%	%	%
< x > (1)	0.0224	0.8873	1.1010	0.0263	0.0032	21.6796	3.0718	5.5691

	Al	Co	Cu	Nb	Ti	V	W	Pb
	%	%	%	%	%	%	%	%
< x > (1)	< 0.0005	0.0797	0.1603	< 0.0002	0.0044	0.0893	0.0305	< 0.0002

	Sn	Sb	B	N	Fe			
	%	%	%	%	%			
< x > (1)	0.0092	< 0.0004	0.0024	0.1024	67.1600			

4МонтажинструкциидляСовокупностьстеклопарусный

fixing method: base plate spigots

Mark out the centre line of proposed glass fence with a chalk line. Determine clamp location based on a sheet size (recommendation on pages 1 & 2). Use base plate as a template to mark out the hole positions and drill holes to suit.

Note: Do not exceed 100mm gaps between glass panels. Optimum gap is 40mm to 60mm

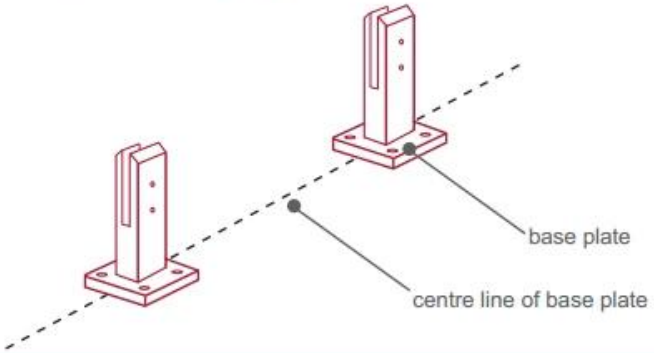

Now the base plated spigots can be fitted to the floor and plumbed via shims (not supplied) under the base plates. Be sure to tighten firmly as the smallest of movement at the base plate will result in noticeable movement at the bottom of the glass fence.

Tip: By setting the two outer spigots of your total span, a string line can be run in the 'throat' of the spigots, giving correct height for all spigots in between

Note: Do not exceed 100mm gap from the fixing surface to the bottom of the glass

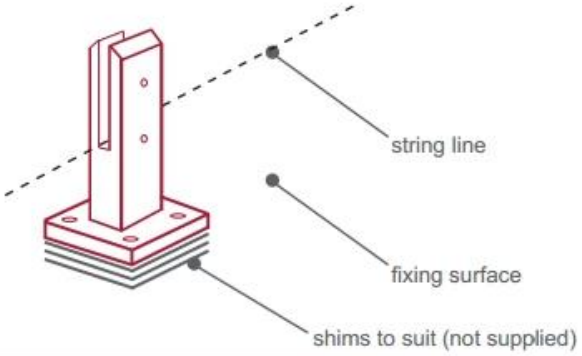

When all spigots are installed, slip domical cover the top of the spigot to hide fixings. It will be necessary to turn the adjustment screws on the spigot face all the way in to allow cover to pass over

Note: Same installation method applies to round base plate spigot

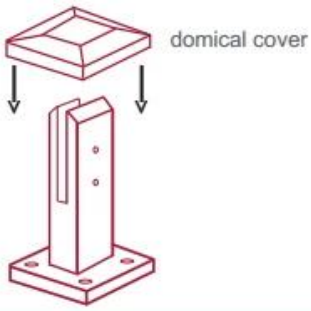

The glass is then installed to the spigots.
Place plastic packers between glass & spigot, at no stage should glass touch the metal
How adjustability works:
1. Place glass in spigot
2. Fix/ tension glass both sides with allen key

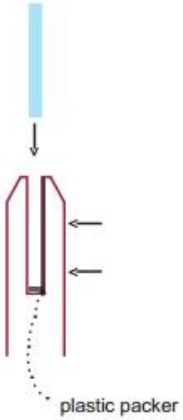

5УпаковкаподробностидляСовокупностьДуплекс 2205 стеклянные патологи-

1 шт в белую коробку; 12 шт в коробку

2014/03/19

6МассаПроизводствоПроцессдляСовокупностьстеклопапиго-

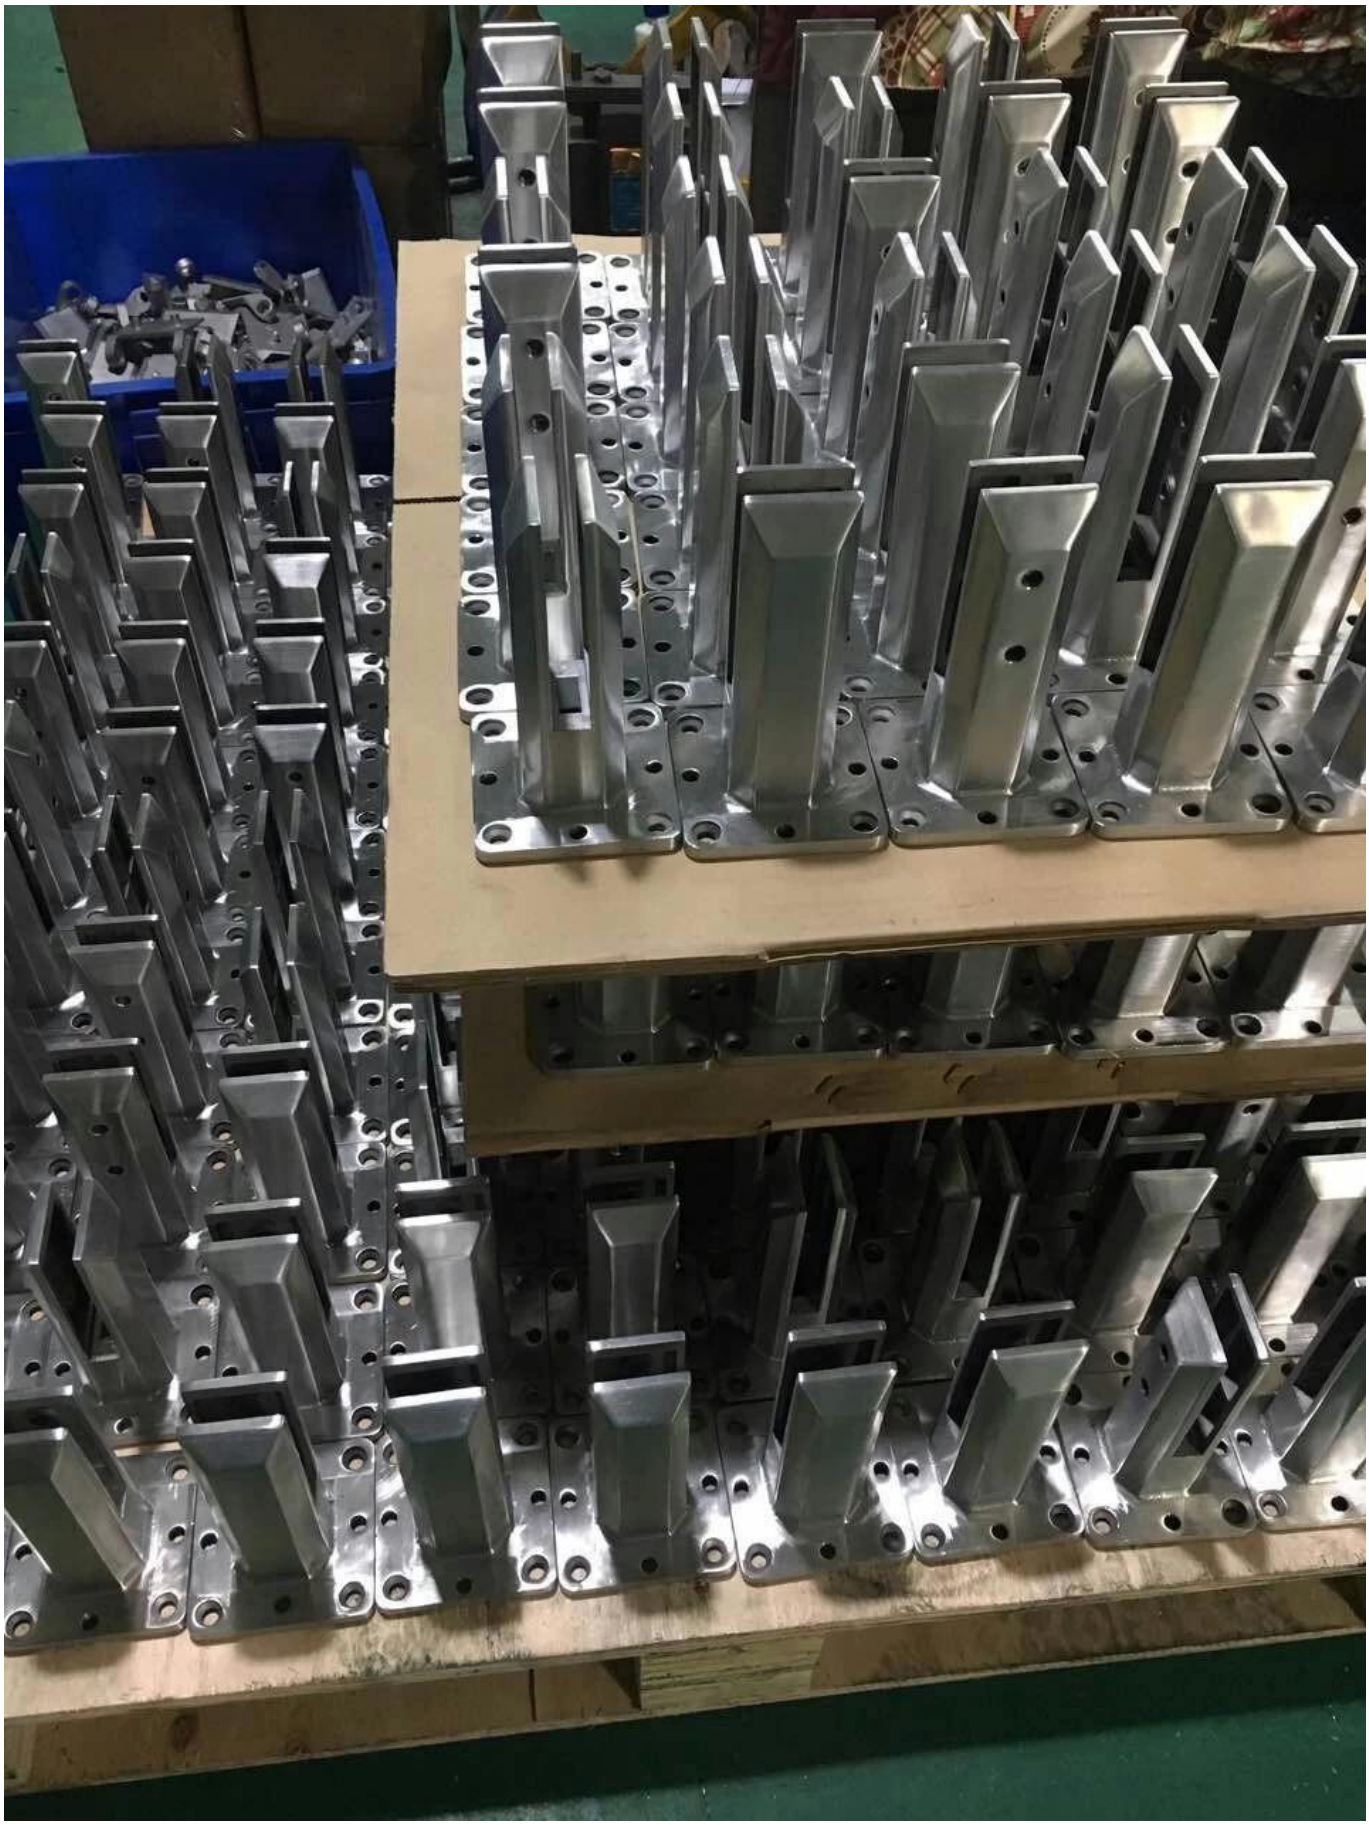

7Болеемоделиизстеклопапигодлявашвыбор-

Glass spigot

MODEL # SBM

MODEL # SCM

MODEL # RBM

MODEL # RCM

8ПроектФотографииизБезраскаженныеСтеклоПерилас участиемстеклопары-

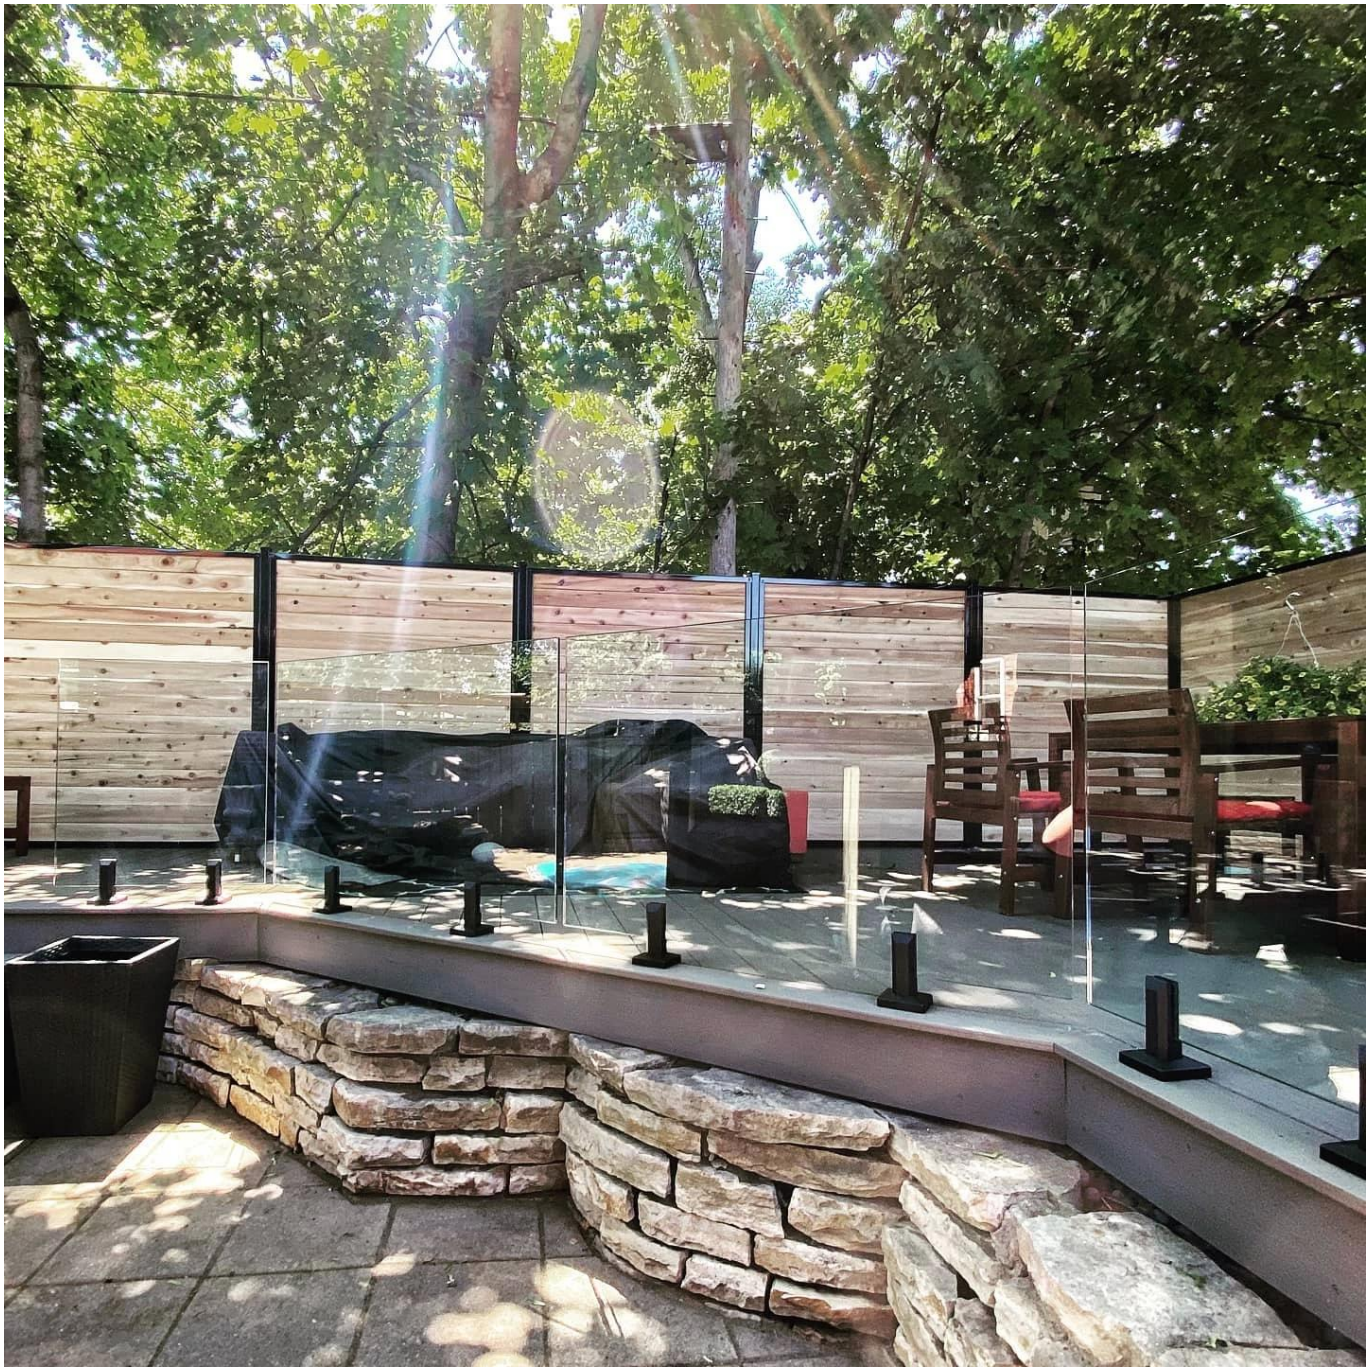

У нас также есть стеклянные шарнирные и магнитные защелки и стеклянные зажимы и закаленное стекло, чтобы пойти с цельной системой безрамоглавной стеклянной перила.

Не стесняйтесь связаться с нами сейчас, чтобы получить цитаты!

Shenzhen Launch Co., Ltd
Проверено SGS, отчет № 19536352_P + T
Офис Добавить:
B5-003, 5 / F-Block 3, здание Yilida, № 1092 Nanshan Road, Наншанский район, Шэньчжэнь, Китай, почтовый индекс 518054

Тел: 86-755-86037559 Факс: 86-755-86372611

Моб (WhatsApp, Wechat, Viber) +86 135 9027 3543

Контакт:ЦелияЧан