

Стеклянные зажимы из нержавеющей стали для стекла 3/8 дюйма 44x44x25 мм (модель G102)

1. Подробная информация

- MOQ 50 шт.
- Для стекла 3/8 дюйма
- Монтируется на квадратные столбы из нержавеющей стали с плоской задней панелью
- Нержавеющая сталь 304/316, полированная или матовая поверхность
- Размер 44x44x25 мм

2. Фотографии для стеклянных зажимов из нержавеющей стали для стекла 3/8 дюйма 44x44x25 мм (модель G102)









3. различные модели стеклянных зажимов из нержавеющей стали для стекла 3/8 дюйма 44x44x25 мм (модель G102)

| | |
|----------|--------------------------|
| Material | Stainless steel 304/ 316 |
| Finish | satın / mirror polished |

| | |
|---------------------|--------------------------|
| Material | Stainless steel 304/ 316 |
| Finish | Satın / mirror polished |
| For glass thickness | 6mm -13.52mm |

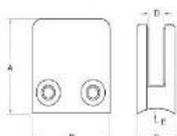


| Model No. | A | B | C | D | E |
|-----------|----|----|----|----|--------|
| G102 | 44 | 44 | 25 | 11 | 0 |
| G102R | 46 | 44 | 25 | 11 | R:21.5 |

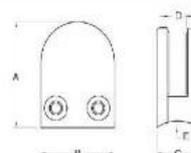

| Model No. | A | B | C | D | E |
|-----------|----|----|----|----|--------|
| G103 | 50 | 40 | 22 | 6 | 0 |
| G104 | 50 | 40 | 28 | 12 | 0 |
| G105 | 55 | 45 | 26 | 14 | 0 |
| G103R | 52 | 40 | 22 | 6 | R:21.5 |
| G104R | 52 | 40 | 28 | 12 | R:21.5 |
| G105R | 58 | 45 | 26 | 14 | R:25.4 |

4. Инструкции по монтажу зажимов из нержавеющей стали

Glass Clamp Installation Guide

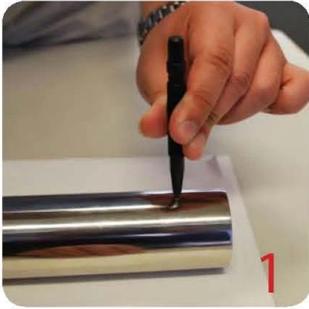

Mark and centre punch desired location of blind rivet nut location.



Drill centre punched hole in tube to suit blind rivet nut.



Insert blind rivet nut into tube and fasten with blind rivet tool.



Check installed blind rivet nut is secure and ready for install.



Align half glass clamp with blind rivet nut inline position. Screw in button head cap screw into thread and tighten with hex key.



Select appropriate rubber gasket to suit glass panel thickness. Install rubber gasket into both sides of glass clamp. (Note rubber gasket marked with sizes).



If heavier clamping load is required please use supplied glass clamp pin, during the install process. Note glass panels will require drilling in order to fit glass clamp pins.



Fit glass panel into position, install second half of glass clamp secure with provided hex screws.



Tighten glass clamps with hex key, and check glass panel are secure with no movement.





