


Espigas de vidrio cuadradas de acero inoxidable Valla de piscina Abrazadera de espiga Escaleras de jardín para el hogar Barandilla de barandilla Balcón Abrazadera de piso de vidrio.

N ° de Modelo.	SBM
peso por pc	1,47 kg/juego
Embalaje	1 unidad en una caja blanca; 12 piezas por caja 365*330*230mm
Material	Dúplex 2205 ; SS 316; SS 304
Finalizar	Negro , Espejo , Satén
Espesor de vidrio	10 mm-17,52 mm
aplicar	piscina de cristal, jardín de cristal, balaustrada, escalera, etc.
Proceso de producción	Fundición de precisión
MOQ	2 piezas
Tiempo de espera	3 días - 15 días



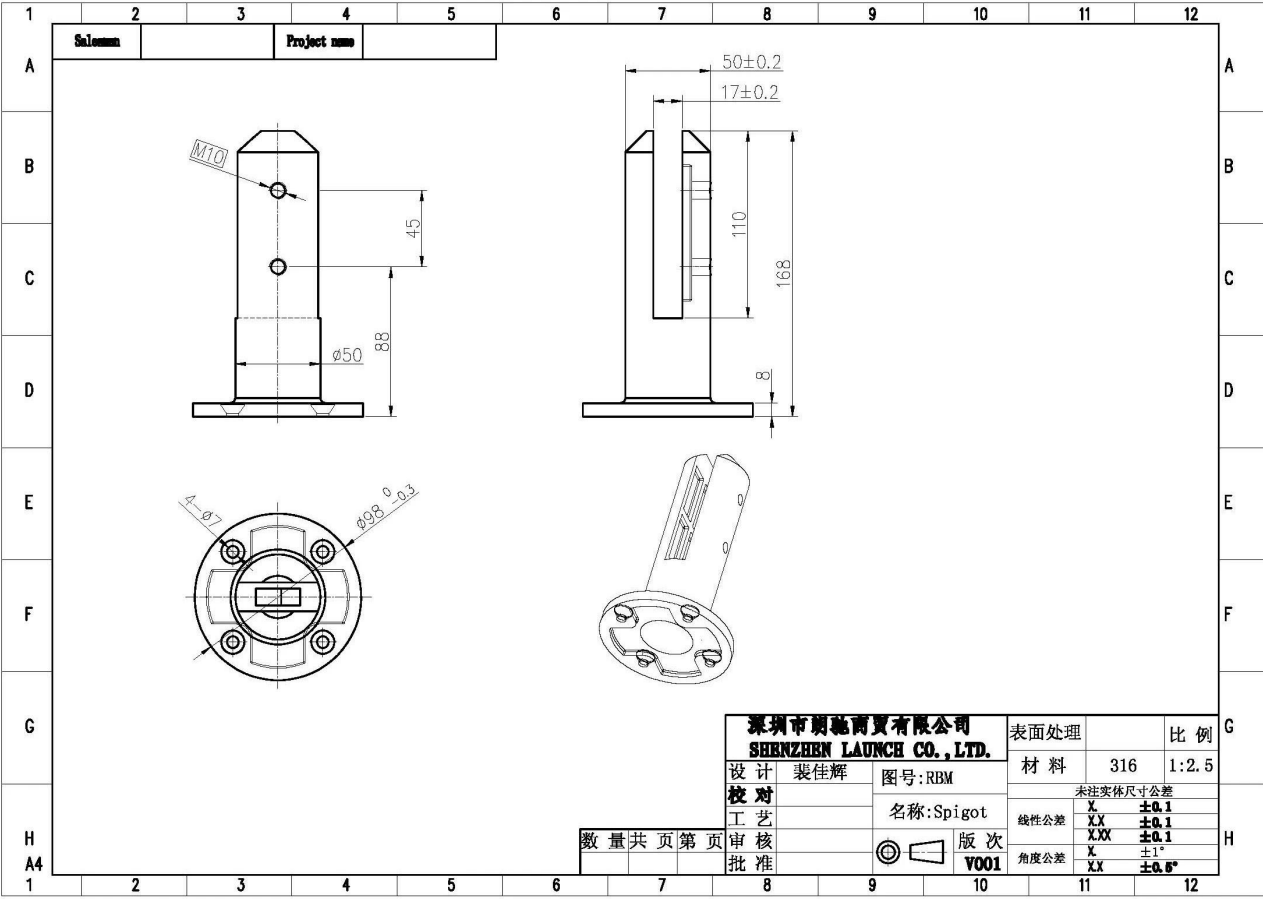

Informe de prueba del material SS duplex 2205-



12/16/2020 5:54:18 PM

Method: Fe-30
 Comment: Cr-, Cr/Ni-steel
 Type Standard 18--8

12/16/2020 5:54:09 PM

Type corr.concentr.

Sample Name:

Sample ID:

	C	Si	Mn	P	S	Cr	Mo	Ni
	%	%	%	%	%	%	%	%
< x > (1)	0.0224	0.8873	1.1010	0.0263	0.0032	21.6796	3.0718	5.5691

	Al	Co	Cu	Nb	Ti	V	W	Pb
	%	%	%	%	%	%	%	%
< x > (1)	< 0.0005	0.0797	0.1603	< 0.0002	0.0044	0.0893	0.0305	< 0.0002

	Sn	Sb	B	N	Fe			
	%	%	%	%	%			
< x > (1)	0.0092	< 0.0004	0.0024	0.1024	67.1600			


Instrucciones de instalación de la abrazadera de espiga de valla de piscina de espigas de vidrio cuadradas de acero inoxidable -



fixing method: base plate spigots

Mark out the centre line of proposed glass fence with a chalk line. Determine clamp location based on a sheet size (recommendation on pages 1 & 2). Use base plate as a template to mark out the hole positions and drill holes to suit.


Note: Do not exceed 100mm gaps between glass panels. Optimum gap is 40mm to 60mm

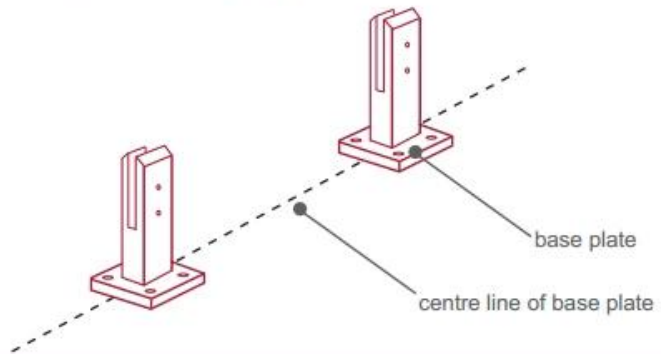

Now the base plated spigots can be fitted to the floor and plumbed via shims (not supplied) under the base plates. Be sure to tighten firmly as the smallest of movement at the base plate will result in noticeable movement at the bottom of the glass fence.


Tip: By setting the two outer spigots of your total span, a string line can be run in the 'throat' of the spigots, giving correct height for all spigots in between

Note: Do not exceed 100mm gap from the fixing surface to the bottom of the glass

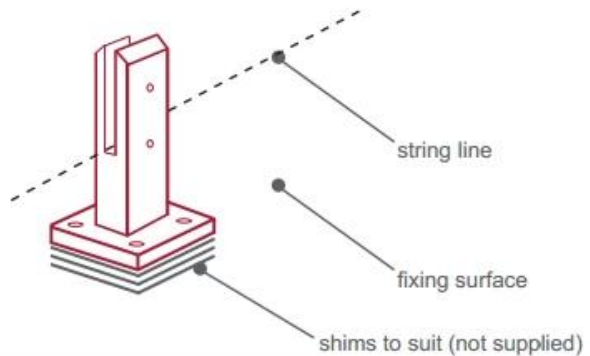

When all spigots are installed, slip domical cover the top of the spigot to hide fixings. It will be necessary to turn the adjustment screws on the spigot face all the way in to allow cover to pass over


Note: Same installation method applies to round base plate spigot

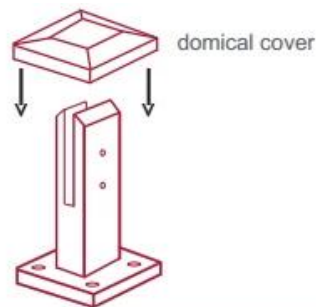

The glass is then installed to the spigots. Place plastic packers between glass & spigot, at no stage should glass touch the metal

How adjustability works:

1. Place glass in spigot
2. Fix/ tension glass both sides with allen key

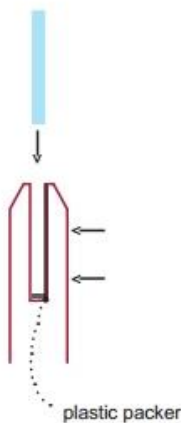

Fotos de instalación del proyecto de grifos de vidrio cuadrados de acero inoxidable abrazadera de grifo de cerca de piscina-







