D-Typ quadratische Glasklemme 316 Edelstahl Spiegel poliert (Modell G102)

1. Detaillierte Informationen für G102

- MOQ 100 Stk
- Für 8-10mm glas
- 304/316 Edelstahl, poliert oder satiniert
- Maß 44x44x25mm

2. Fotos für D-Typ quadratische Glasklemme 316 Edelstahl Spiegel poliert (Modell G102)

3. verschiedene Modelle von D-Typ quadratischen Glas Klemme 316 Edelstahl

Material	Stainless steel 304/ 316
Finish	satin / mirror polished

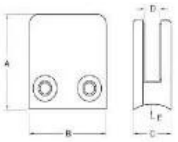

Model No.	A	B	C	D	E
G102	44	44	26	11	0
G102R	46	44	26	11	R-21.5

Material	Stainless steel 304/ 316
Finish	Satin / mirror polished
For glass thickness	6mm -13.52mm

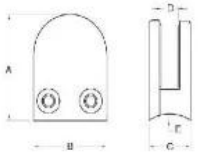

Model No.	A	B	C	D	E
G103	50	40	22	8	0
G104	50	40	26	12	0
G105	55	46	26	14	0
G103R	52	40	22	8	R-21.5
G104R	52	40	26	12	R-21.5
G105R	58	46	26	14	R-26.4

4. Montageanleitung von Edelstahl-Glasschellen

Glass Clamp Installation Guide

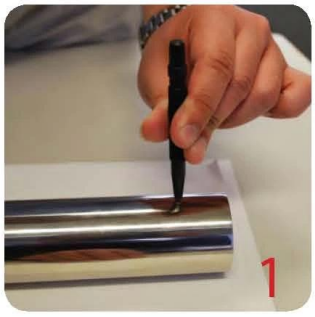

Mark and centre punch desired location of blind rivet nut location.

Drill centre punched hole in tube to suit blind rivet nut.

Insert blind rivet nut into tube and fasten with blind rivet tool.

Check installed blind rivet nut is secure and ready for install.

Align half glass clamp with blind rivet nut inline position. Screw in button head cap screw into thread and tighten with hex key.

Select appropriate rubber gasket to suit glass panel thickness. Install rubber gasket into both sides of glass clamp. (Note rubber gasket marked with sizes).

If heavier clamping load is required please use supplied glass clamp pin, during the install process. Note glass panels will require drilling in order to fit glass clamp pins.

Fit glass panel into position, install second half of glass clamp secure with provided hex screws.

Tighten glass clamps with hex key, and check glass panel are secure with no movement.

5. Projektfotos von D TYP EDELSTAHL GLASKLEMME