Acier inoxydable Carré Verre Spigots Piscine Clôture Spigot Clamp Maison Jardin Escaliers Balustrade Garde-corps Balcon Verre Sol Clamp.

Numéro de modèle	SBM
Poids par pièce	1,47 kg/ensemble
Emballage	1 pièces dans une boîte blanche ; 12 pièces dans un carton 365*330*230mm
Matériel	Duplex 2205 ; SS 316 ; SS 304
Finir	Noir , Miroir , Satin
Epaisseur du verre	10mm-17.52mm
Appy	piscine en verre, jardin en verre, balustrade, escalier et ainsi de suite
Processus de production	Moulage de précision
MOQ	2 pièces
Délai de mise en œuvre	3 jours - 15 jours

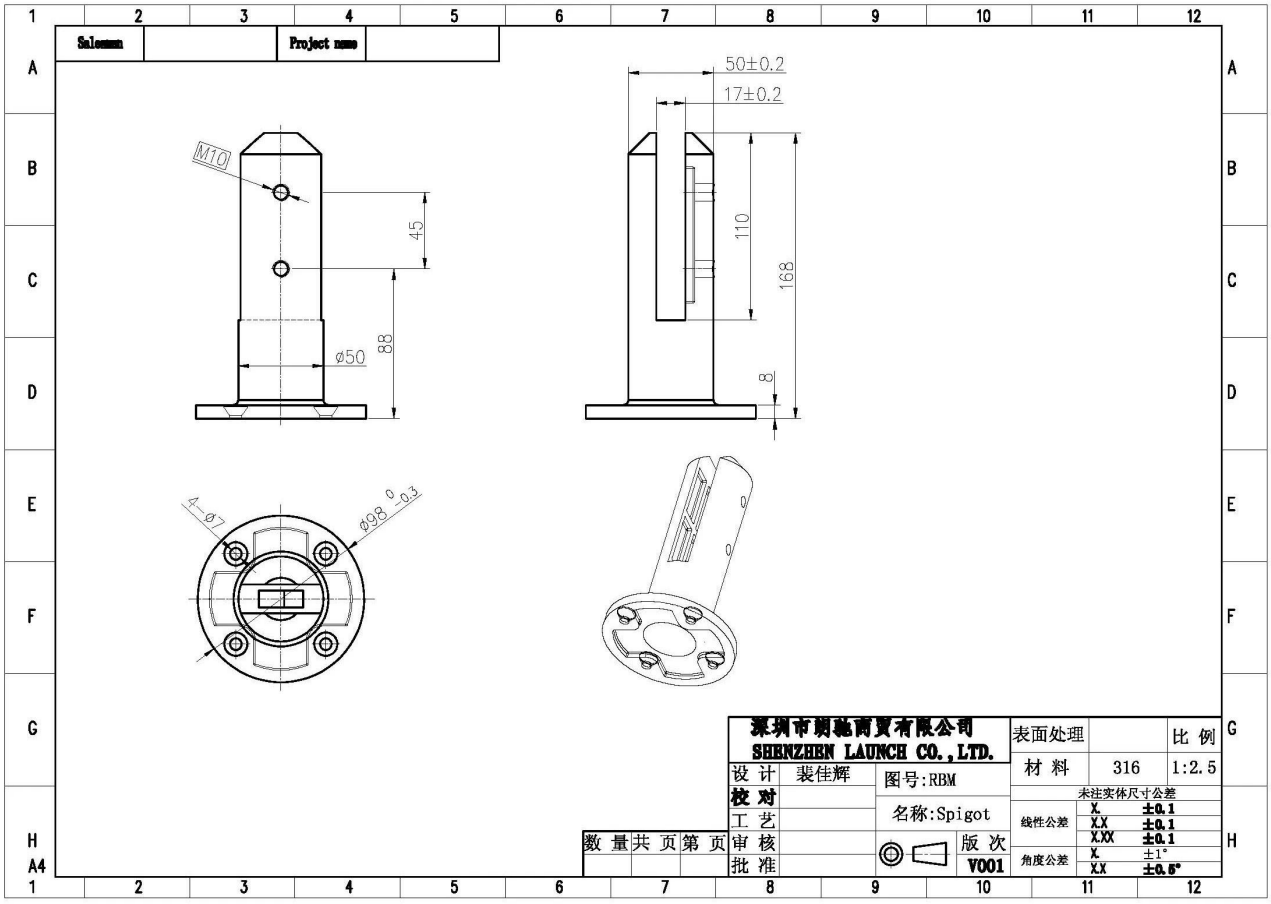

Rapport de test du matériau SS duplex 2205-

SPECTRO

12/16/2020 5:54:18 PM

Method: Fe-30
Comment: Cr-, Cr/Ni-steel
Type corr.concentr.
Type Standard 18--8
Sample Name:
Sample ID:

12/16/2020 5:54:09 PM

	C	Si	Mn	P	S	Cr	Mo	Ni
	%	%	%	%	%	%	%	%
< x > (1)	0.0224	0.8873	1.1010	0.0263	0.0032	21.6796	3.0718	5.5691

	Al	Co	Cu	Nb	Ti	V	W	Pb
	%	%	%	%	%	%	%	%
< x > (1)	< 0.0005	0.0797	0.1603	< 0.0002	0.0044	0.0893	0.0305	< 0.0002

	Sn	Sb	B	N	Fe			
	%	%	%	%	%			
< x > (1)	0.0092	< 0.0004	0.0024	0.1024	67.1600			

Instructions d'installation de la pince à ergot de clôture de piscine en verre carré en acier inoxydable -

fixing method: base plate spigots

Mark out the centre line of proposed glass fence with a chalk line. Determine clamp location based on a sheet size (recommendation on pages 1 & 2). Use base plate as a template to mark out the hole positions and drill holes to suit.

Note: Do not exceed 100mm gaps between glass panels. Optimum gap is 40mm to 60mm

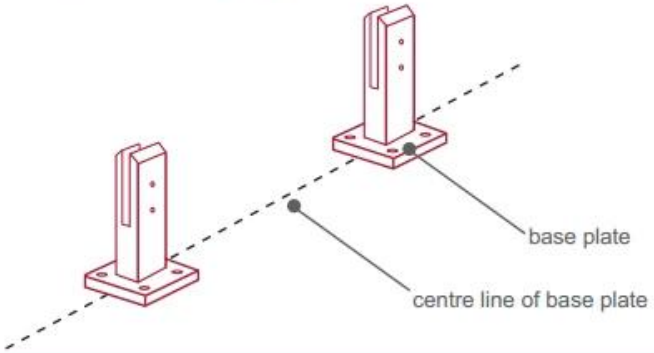

Now the base plated spigots can be fitted to the floor and plumbed via shims (not supplied) under the base plates. Be sure to tighten firmly as the smallest of movement at the base plate will result in noticeable movement at the bottom of the glass fence.

Tip: By setting the two outer spigots of your total span, a string line can be run in the 'throat' of the spigots, giving correct height for all spigots in between

Note: Do not exceed 100mm gap from the fixing surface to the bottom of the glass

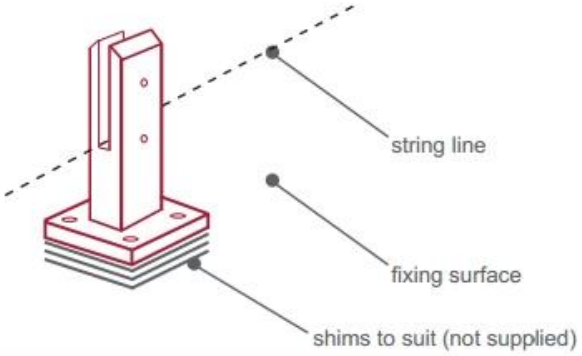

When all spigots are installed, slip domical cover the top of the spigot to hide fixings. It will be necessary to turn the adjustment screws on the spigot face all the way in to allow cover to pass over

Note: Same installation method applies to round base plate spigot

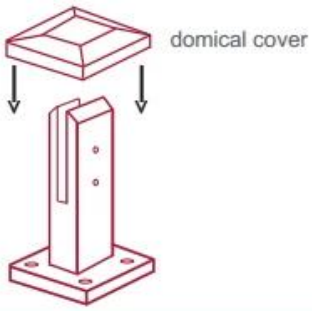

The glass is then installed to the spigots.
Place plastic packers between glass & spigot, at no stage should glass touch the metal
How adjustability works:
1. Place glass in spigot
2. Fix/ tension glass both sides with allen key

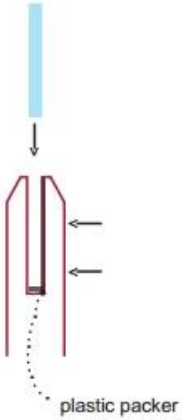

Photos de l'installation du projet de la pince à ergot de clôture de piscine en verre carré en acier inoxydable -